



FITTING INSTRUCTIONS FOR CP0220BL AERO CRASH PROTECTORS BMW K1200 GT 06'-



Please note that the way the kit is packed does not necessarily represent the way of mounting to the bike
PLEASE NOTE THE PROTECTOR IS FITTED WITH THE LARGE DIAMETER FACING THE FRONT OF THE BIKE.

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – the rubber washers should be thrown away!

Near side (left side as you sit on bike)

- Remove upper fairing.
- Remove top front *engine to frame* M10 diameter bolt and spacer.
- Remove the washer from the bolt and fit to one of the R&G replacement stainless steel bolts. Fit this assembly back on to bike and tighten.
- Screw the marking tool into the bolt hole so that when the fairing is fitted the point will just touch the inside of it.
- Offer the fairing back into position so that the tool marks the position inside the fairing.
- Using a 28mm tank cutter (hole saw/cone cutter), drill through the fairing with the pilot drill using the mark made by the tool to find the centre. Replace the fairing and ensure that the pilot hole is in the correct position. Remove the fairing and support it. Drill through carefully from the outside with the tank cutter.
- Replace the fairing.
- Slide one of the washers onto the longer bolt.
- Next, slide one of the crash protectors onto the bolt.
- Finally, slide the longer spacer onto the with the larger diameter next to the protector
- Insert assembly through new fairing hole.
- Tighten assembly with a 17mm socket, ensuring that you do not over-tighten. Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the protector. Do not exceed 40nm of torque.

Offside

- Remove upper fairing
- Remove top front *engine to frame* M10 diameter bolt.
- Using a 8mm ring spanner undo the pinch bolt on the frame so that you can remove the aluminium spacer.(See picture above)-
- Fit the R&G replacement spacer into the frame with the counterbore facing outwards and tighten the pinch bolt.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX

Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com



- Fit the R&G replacement stainless steel bolt through the spacer and into bike and tighten.
- Screw the marking tool into the bolt hole so that when the fairing is fitted the point will just touch the inside of it.
- Offer the fairing back into position so that the tool marks the position inside the fairing.
- Using a 28mm tank cutter (hole saw/cone cutter), drill through the fairing with the pilot drill using the mark made by the tool to find the centre. Replace the fairing and ensure that the pilot hole is in the correct position. Remove the fairing and support it. Drill through carefully from the outside with the tank cutter.
- Replace the fairing.
- Slide one of the washers onto the shorter bolt
- Slide the crash protector onto the bolt
- Slide the shorter spacer on to the bolt with the larger diameter next to the protector
- Insert assembly through new fairing hole.
- Tighten assembly with a 17mm socket, ensuring that you do not over-tighten. Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the protector. Do not exceed 40nm of torque.

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in resellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX

Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 www.rg-racing.com Email: info@rg-racing.com