




**FITTING INSTRUCTIONS FOR ECC0015 RHS ENGINE CASE COVER
KTM LC8 (NOT RC8)**

**This item fits 950SM, 950R, SUPERDUKE, SUPERDUKE R, 990, 990 R, ADVENTURE 990,
950 ADVENTURE, 950 ENDURO.**

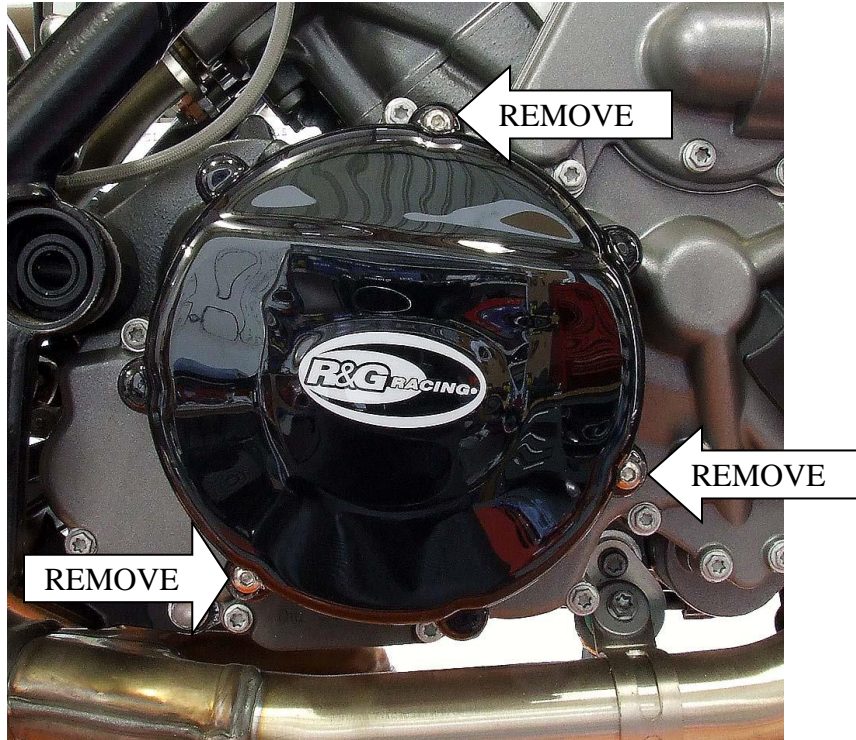

In this kit there should be:
1 x Engine Case Cover (ECC0015)
3 x M6x35mm CAP HEAD BOLTS

PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING

- Please make sure the engine is cold before proceeding with the fitting of the R&G cover.
- On certain models you may have to remove the brake pedal bolt to allow the engine case cover to be fitted.
- Remove the three engine case bolts arrowed above. Hold the cover loosely over the case to help identify the correct ones. **DO NOT REMOVE ALL OF THE CASE BOLTS.**
- Offer up the R&G cover to the engine and carefully fit it over the engine casing. Ensure that the three R&G bolts are lined up with the holes in the engine casing, and then push on as far as it will go.
- With a 5mm Allen key tighten the bolts equally so that they pull the cover into place. **DO NOT FULLY TIGHTEN.**
- Finally use a torque wrench set at 10 nm (7 Lb ft) to fully tighten.



- It is suggested that you check the tightness of the mounting bolts on a regular basis i.e. when cleaning or once a month.
- NOTE for the cleaning of this product you should only use a soft polishing cloth and a mild general cleaning agent
- AVOID HARMFUL CHEMICALS IF IN DOUBT DO NOT USE AS THEY COULD ALTER THE STRENGTH OF THE COVER.
- R&G will accept no liability if the above procedure and torque settings are not followed.

ISSUE 3 8/11/2022 NEW SPACER UPDATE

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.



**FRANCE
INSTRUCTIONS DE MONTAGE ECC0015 RHS
KTM LC8 (NOT RC8)**

Ce kit contient:
1 x Protection moteur
3 x Vis M6 Boulons

MERCI DE LIRE LA NOTICE AVANT DE COMMENCER LE MONTAGE

- Veiller à ce que le moteur de la moto soit froid
- Enlever les 3 vis de fixation du carter moteur (voir photo ci-dessus). Ne pas retirer toutes les vis de fixations de carter.
- Placer la protection sur le carter (attention au sens de montage)
- Visser légèrement les 3 vis R&G dans le carter moteur (attention à ne pas mettre les vis de travers, nous vous conseillons de les visser à la main dans un premier temps).
- A l'aide d'une clé Allen de 5mm, visser les vis, ne pas bloquer les vis pour le moment.
- A l'aide d'une clé dynamométrique, serrer les 3 vis à 10 nm, (7 Lb ft).
- Note importante:
 - vérifier le serrage des vis au moins une fois par mois.
 - Le nettoyage de la protection, doit se faire à l'aide d'un produit nettoyant non agressif et à l'aide d'un chiffon doux.
- L'UTILISATION D'AGENT NETTOYANT TROP PUISSANT PEUT ALTERER LA FINITION DE VOTRE PROTECTION R&G.
- Aucune garantie ne sera acceptée par R&G en cas de mauvais couple de serrage et en cas d'utilisation de nettoyeurs trop agressifs.