



**FITTING INSTRUCTIONS FOR BRG0019 BRANDED RADIATOR GUARD
FOR BMW F900R/XR 2020-**



THIS KIT CONTAINS THE ITEMS PICTURED AND LABELLED OVER PAGE.

SOME PARTS MAY BE SHOWN FOR CLARITY OF INSTRUCTIONS ONLY.

DO NOT PROCEED UNTIL YOU ARE SURE ALL PARTS ARE PRESENT.

PLEASE READ ALL INSTRUCTIONS BEFORE PROCEEDING.

**IF IN ANY DOUBT WHEN FITTING OUR PRODUCTS, CONSULT ONE OF
OUR DEALERS OR HAVE FITTED BY A QUALIFIED TECHNICIAN.**

PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE
WAY OF MOUNTING TO THE BIKE.

IN THE EVENT OF RUBBER WASHERS BEING USED TO HOLD COMPONENTS ONTO BOLTS,
THESE RUBBER WASHERS CAN BE THROWN AWAY.

DIGITAL COPIES OF THESE INSTRUCTIONS ARE AVAILABLE FROM:


WWW.RG-RACING.COM




<u>TOOLS REQUIRED</u>	<u>GENERAL TORQUE SETTINGS</u>
<ul style="list-style-type: none"> • Set of Metric Torx keys to include T25,30 and T40 sizes. • Flat bladed Screwdriver. 	<p>M4 BOLT = 8Nm</p> <p>M5 BOLT = 12Nm</p> <p>M6 BOLT = 15Nm</p> <p>M8 BOLT = 20Nm</p> <p>M10 BOLT = 40Nm</p> <p>M12 BOLT = 40Nm</p>

LEGEND


ITEM NO.	DESCRIPTION	QTY
ITEM 1	BRANDED RADIATOR GUARD (RAD0019SSCOMP FIN)	1
ITEM 2	SELF ADHESIVE FOAM x 100mm LONG	4
ITEM 3	CABLE TIES (CT220)	8

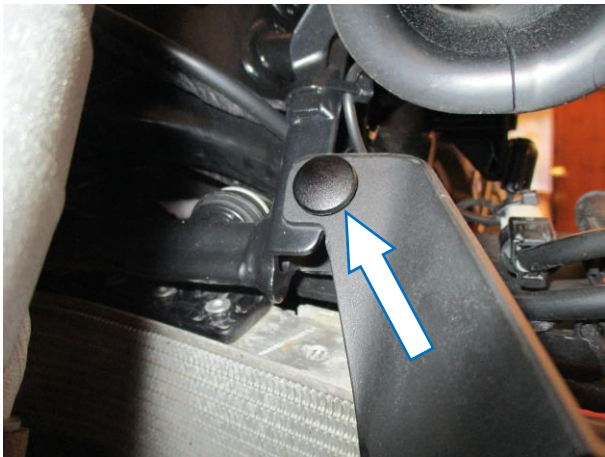


PICTURE 1

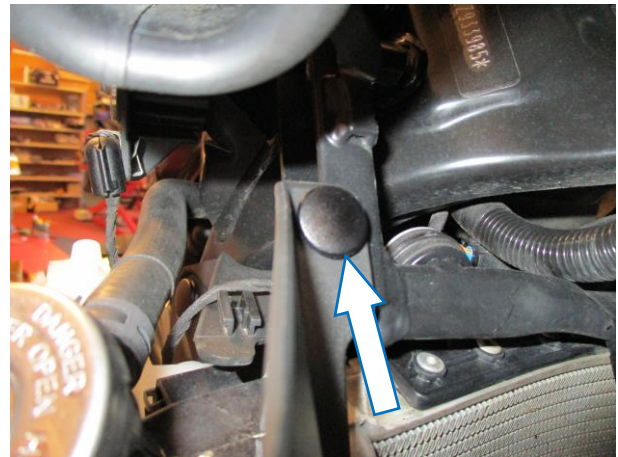


PICTURE 2

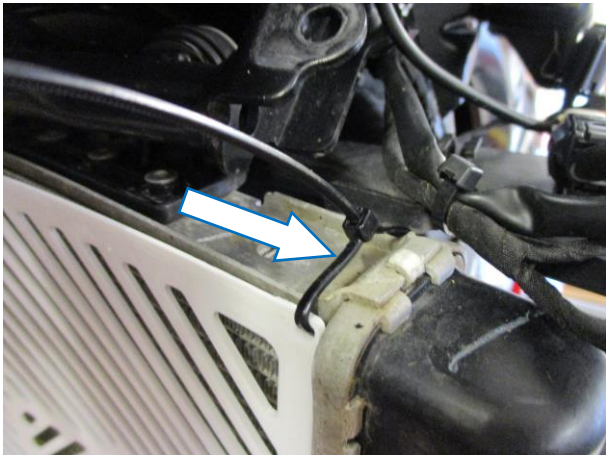

PICTURE 3

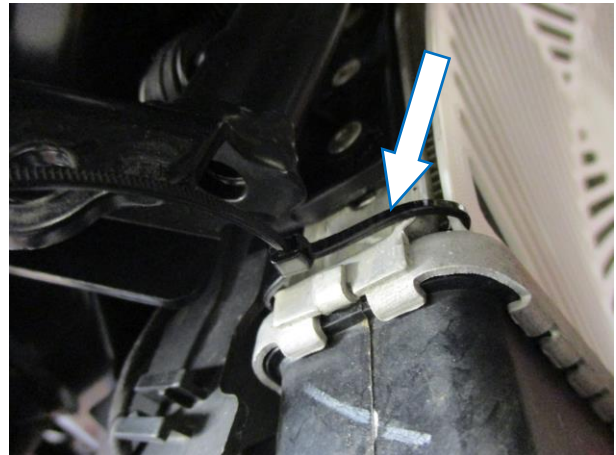

PICTURE 4

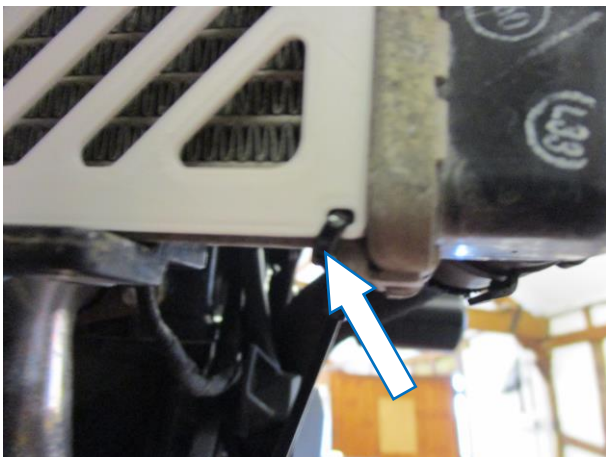

PICTURE 5



PICTURE 6

FITTING INSTRUCTIONS

- To fit the branded radiator guard to the bike, first cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they will sit between the radiator guard and the radiator.
- Remove both side fairings to ease fitment.
- Remove the two pop rivets as shown in **pictures 1 and 2** by carefully using a flat screwdriver and prying the middle parts upwards.
- Carefully unclip and remove the original radiator panel.
- Place the branded radiator guard into position shown in the top picture and using the supplied cable ties secure into position (please ensure the cable ties do not go through the cooling matrix and are only located through the frame only) as shown in **pictures 3, 4, 5 and 6**.
- Refit the original radiator panel and both fairing as original.

ISSUE 1 01/07/2020 (NSY)

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
 Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P - at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



**NOTICE DE MONTAGE POUR BRG0019 GRILLE DE PROTECTION RADIATEUR
POUR BMW F900R/XR 2020-**



CE KIT CONTIENT LES ARTICLES ILLUSTRÉS ET ÉTIQUETES SUR LA PAGE.

CERTAINES PARTIES PEUVENT ÊTRE PRÉSENTES UNIQUEMENT POUR LA CLARTÉ DES INSTRUCTIONS.

NE PAS PROCÉDER AU MONTAGE TANT QUE VOUS N'ÊTES PAS SÛR QUE TOUTES LES PIÈCES SOIENT PRÉSENTES.

VEUILLEZ LIRE TOUTES LES INSTRUCTIONS AVANT DE CONTINUER.

EN CAS DE DOUTE LORS DU MONTAGE DE NOS PRODUITS, CONSULTEZ UN DE NOS REVENDEURS OU FAITES APPEL À UN TECHNICIEN QUALIFIÉ.

VEUILLEZ NOTER QUE LA FAÇON DONT LE KIT EST EMBALLÉ NE REPRÉSENTE PAS NECESSAIREMENT LA MANIÈRE DE LE MONTER SUR LA MOTO.

SI DES RONDELLES EN CAOUTCHOUC SONT UTILISÉES POUR MAINTENIR LES COMPOSANTS SUR LES BOULONS, ELLES PEUVENT ÊTRE JETÉES.

NOTICE DISPONIBLE AU TÉLÉCHARGEMENT SUR : WWW.RG-RACING.COM



<u>OUTILS REQUIS</u>	<u>VALEURS DE SERRAGE GÉNÉRALES</u>
<ul style="list-style-type: none"> • Clés Torx T25,30 et T40 • Tournevis plat 	<p>M4 BOULON = 8Nm</p> <p>M5 BOULON = 12Nm</p> <p>M6 BOULON = 15Nm</p> <p>M8 BOULON = 20Nm</p> <p>M10 BOULON = 40Nm</p> <p>M12 BOULON = 40Nm</p>

LÉGENDE

ARTICLE NO.	DESCRIPTION	QTÉ
ARTICLE 1	PROTECTION RADIATEUR (RAD0019SSCOMP FIN)	1
ARTICLE 2	MOUSSE AUTOCOLLANTE x 100mm DE LONG	4
ARTICLE 3	COLLIERS DE SERRAGE (CT220)	8

NOTICE DE MONTAGE

- Pour installer la protection radiateur sur la moto, coupez d'abord la bande de mousse fournie en morceaux de 10 mm de large et collez-les à l'arrière du cadre de la protection radiateur, de sorte qu'ils se placent entre la protection radiateur et le radiateur.
- Retirez les deux carénages latéraux pour faciliter le montage.
- Retirez les deux rivets pop comme indiqué sur les photos 1 et 2 en utilisant soigneusement un tournevis plat et en soulevant les parties centrales vers le haut.
- Déclipper et retirer avec précaution le panneau de radiateur d'origine.
- Placez la protection radiateur de marque dans la position indiquée sur la photo du haut et en utilisant les attaches de câble fournies en place (veuillez vous assurer que les attaches de câble ne traversent pas la matrice de refroidissement et ne soient situées qu'à travers le cadre uniquement) comme indiqué sur les photos 3, 4, 5 et 6.
- Remontez le panneau de radiateur d'origine et les deux carénages comme d'origine.

ISSUE 1 01/07/2020 (NSY)



**MONTAGEANLEITUNG FÜR G0019 KÜHLERSCHUTZ MIT MARKENLOGO
FÜR BMW F900R/XR 2020-**



ALLE KIT-TEILE SIND UNTEN ABGEBILDET UND GEKENNZEICHNET.

DIE ABGEBILDETEN TEILE DIENEN LEDIGLICH ZUR ERKLÄRUNG.

ÜBERPRÜFEN SIE ZUERST, DASS ALLE TEILE VORHANDEN SIND.

LESEN SIE DIE MONTAGEANLEITUNG KOMPLETT DURCH, BEVOR SIE ANFANGEN.

**WENN SIE BEI DER MONTAGE DIESER PRODUKTES UNSICHER SIND,
BITTE EINEN UNSERER HÄNDLER KONTAKTIEREN ODER DAS KIT VON
EINEM QUALIFIZIERTEN ZWEIRADMECHANIKER MONTIEREN LASSEN.**

DIE VERPACKUNG DER TEILE STELLT NICHT DIE REIHENFOLGE DER MONTAGE DAR.

HINWEIS FÜR KITS MIT PLASTIKUNTERLEGSSCHEIBEN AN DEN SCHRAUBEN –

DIESE PLASTIK-UNTERLEGSSCHEIBEN WERDEN NICHT FÜR DEN EINBAU BENÖTIGT!

**EINE DIGITALE VERSION DIESER MONTAGEANLEITUNG KANN AUF
FOLGENDER SEITE HERUNTERGELADEN WERDEN:**

WWW.RG-RACING.COM

R&G

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



<u>SIE BENÖTIGEN FOLGENDES:</u>	<u>ALLGEM. ANZUGSDREHMOMENTE</u>
<ul style="list-style-type: none"> • Satz Torx-Schlüssel inkl. T25,30 und T40 <ul style="list-style-type: none"> • Flachen Schraubenzieher 	M4 SCHRAUBE = 8Nm M5 SCHRAUBE = 12Nm M6 SCHRAUBE = 15Nm M8 SCHRAUBE = 20Nm M10 SCHRAUBE = 40Nm M12 SCHRAUBE = 40Nm

LIEFERUMFANG

ARTIKEL NR.	BESCHREIBUNG	MENGE
ARTIKEL 1	KÜHLERSCHUTZ MIT MARKENLOGO (RAD0019SSCOMP FIN)	1
ARTIKEL 2	SELBSTKLEBENDE SCHAUMSTOFFSTREIFEN 100mm	4
ARTIKEL 3	KABELBINDER (CT220)	8

MONTAGEANLEITUNG

- Um den Kühlerschutz am Motorrad montieren zu können, schneiden Sie zuerst die mitgelieferten Schaumstoffstreifen in 10 mm breite Streifen und kleben Sie diese auf der Rückseite des Kühlerschutzrahmens, so dass sie zwischen dem Kühlerschutz und dem Kühler angebracht sind.
- Entfernen Sie beide Seitenverkleidung, um die Montage zu erleichtern.
- Entfernen Sie die zwei Plastiknieten, die oben in den **Abbildungen 1 und 2** gekennzeichnet sind – benutzen Sie einen flachen Schraubenzieher, um sie mittig nach oben zu hebeln.
- Die original Kühlerverkleidung vorsichtig lösen und entfernen.
- Den R&G Kühlerschutz in Position bringen wie in der obersten Abbildung abgebildet und mit den mitgelieferten Kabelbindern befestigen (bitte darauf achten, dass Sie die Kabelbinder durch den Kühler fädeln und nicht durch das Gitter des Kühlerschutz – siehe **Abbildungen 3, 4, 5 und 6**).
- Montieren Sie die original Kühlerverkleidung und beide Seitenverkleidungen wie ursprünglich wieder.

AUSGABE 1 01/07/2020 (NSY)