




**Fitting Instructions for SRG0025 Radiator Guard**  
**HONDA CB650F and CBR650F 2013**

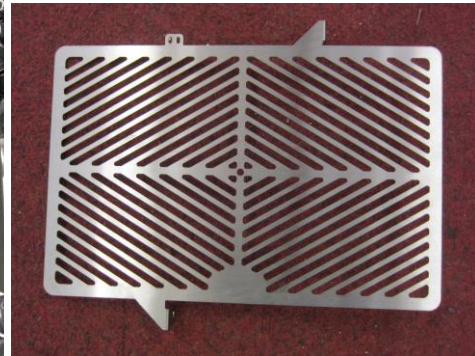

**In This Kit There Should Be**  
**1x Radiator Guard (SRG0025).**  
**2x 100mm Lengths of self-adhesive Foam.**  
**2x Black Cable Ties (220mm)**

**TOOLS REQUIRED**

- Socket set to include 8 and 10mm socket & wrench.



PICTURE 1



PICTURE 2



PICTURE 3

**FITTING INSTRUCTIONS**

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Remove the upper mounting bolt as arrowed in picture 1.
- Remove the lower mounting bolt as arrowed in picture 2.
- Offer the radiator guard into position and reuse the original bolts to secure the upper and lower mounts as shown in picture.
- Use one of the cable ties through the slots to secure the radiator into position as shown in picture 3.
- Tighten all bolts evenly and ensure the radiator is correctly mounted.

ISSUE 1 05/09/2013 (NSY)



#### **CONSUMER NOTICE**

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect.

Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

#### **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.


R&G Racing

Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ

Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)



**INSTRUCTIONS DE MONTAGE POUR SRG0025 Grille de protection**  
**HONDA CB650F and CBR650F 2013**

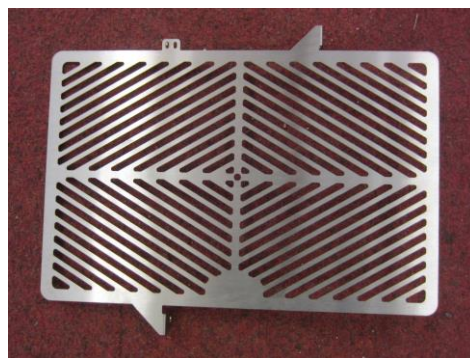

**Le kit doit contenir :**

- 1x Grille de protection (RAD0155BK)
- 2x 100mm Mousse autocollante
- 2 x serre câble (220mm)

**OUTILS REQUIS**

- Jeu de clés 8 et 10mm.

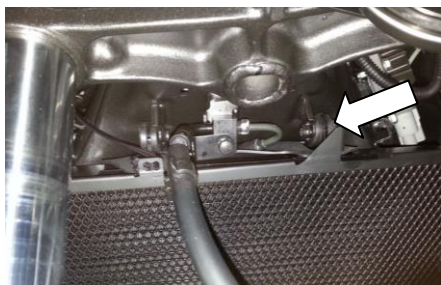


PHOTO 1



PHOTO 2



PHOTO 3

**Instructions de montage:**

- Couper la mousse en bandeaux de 10mm puis collez ces bandeaux au bas du support de protection radiateur, de façon à ce que ces bandeaux se situent entre la protection radiateur et le radiateur.
- Enlever le boulon de fixation supérieur (Photo 1).
- Enlever le boulon de fixation inférieur (Photo 2).
- Mettre la grille en position et réutiliser les boulons d'origine pour fixer les supports supérieurs et inférieurs (Photo).
- Utiliser un des colliers de serrage dans les fentes pour fixer le radiateur en position (Photo 3).
- Serrer tous les boulons de façon égale et veiller à ce que le radiateur soit correctement monté.