



## 814850 BMW F750GS & F850GS Shock Shield Instructions

Kit Includes:

|    |                    |                     |
|----|--------------------|---------------------|
| 1X | Moulding           | C814850M            |
| 2X | M6 X 25mm Bolts    | CBOLM60011          |
| 2X | M6 Nyloc Nuts      | CNUTM60003          |
| 2X | Small Washers      | CWASM60003          |
| 2X | Spacers            | CSPAM60011          |
| 1X | Foam Strip (110mm) | CFOA0001 Pre-fitted |

- Fig 1 - illustrates the OEM rubber shock shield, remove the plastic pins highlighted **RED**.
- Fig 2 - side profile showing the fitment of the Pyramid shock shield.

Check fixings periodically.

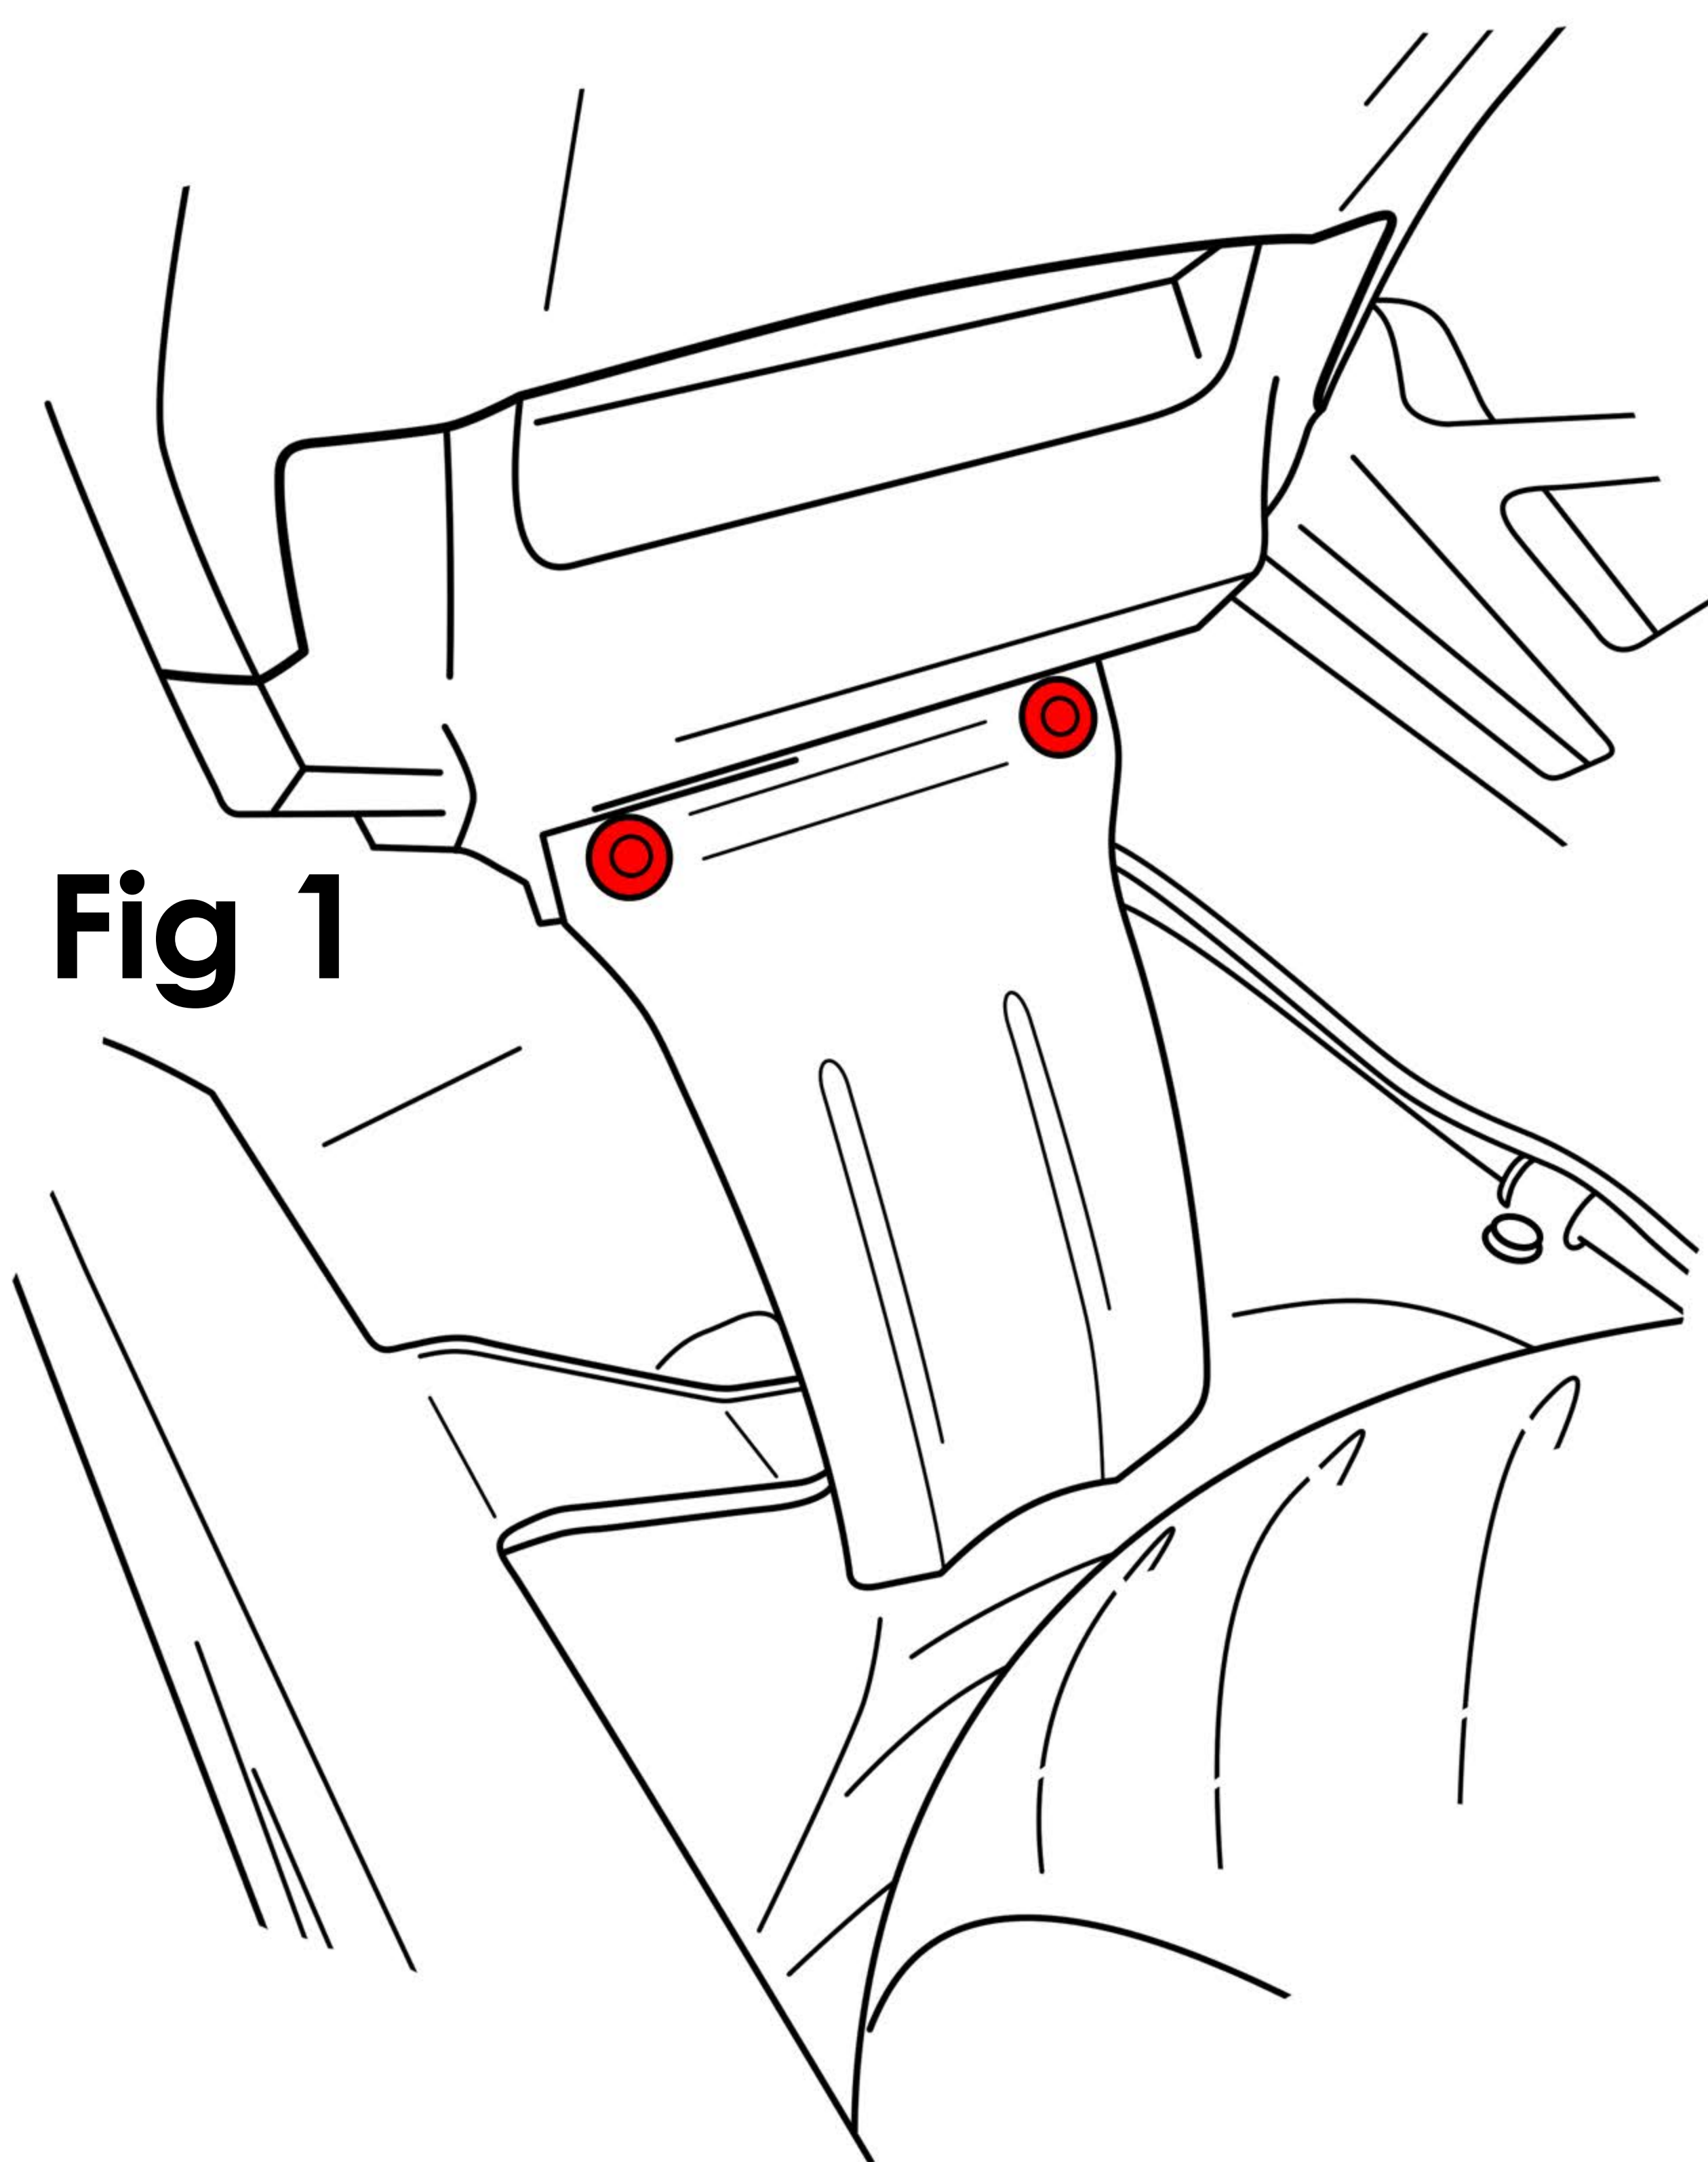


Fig 1

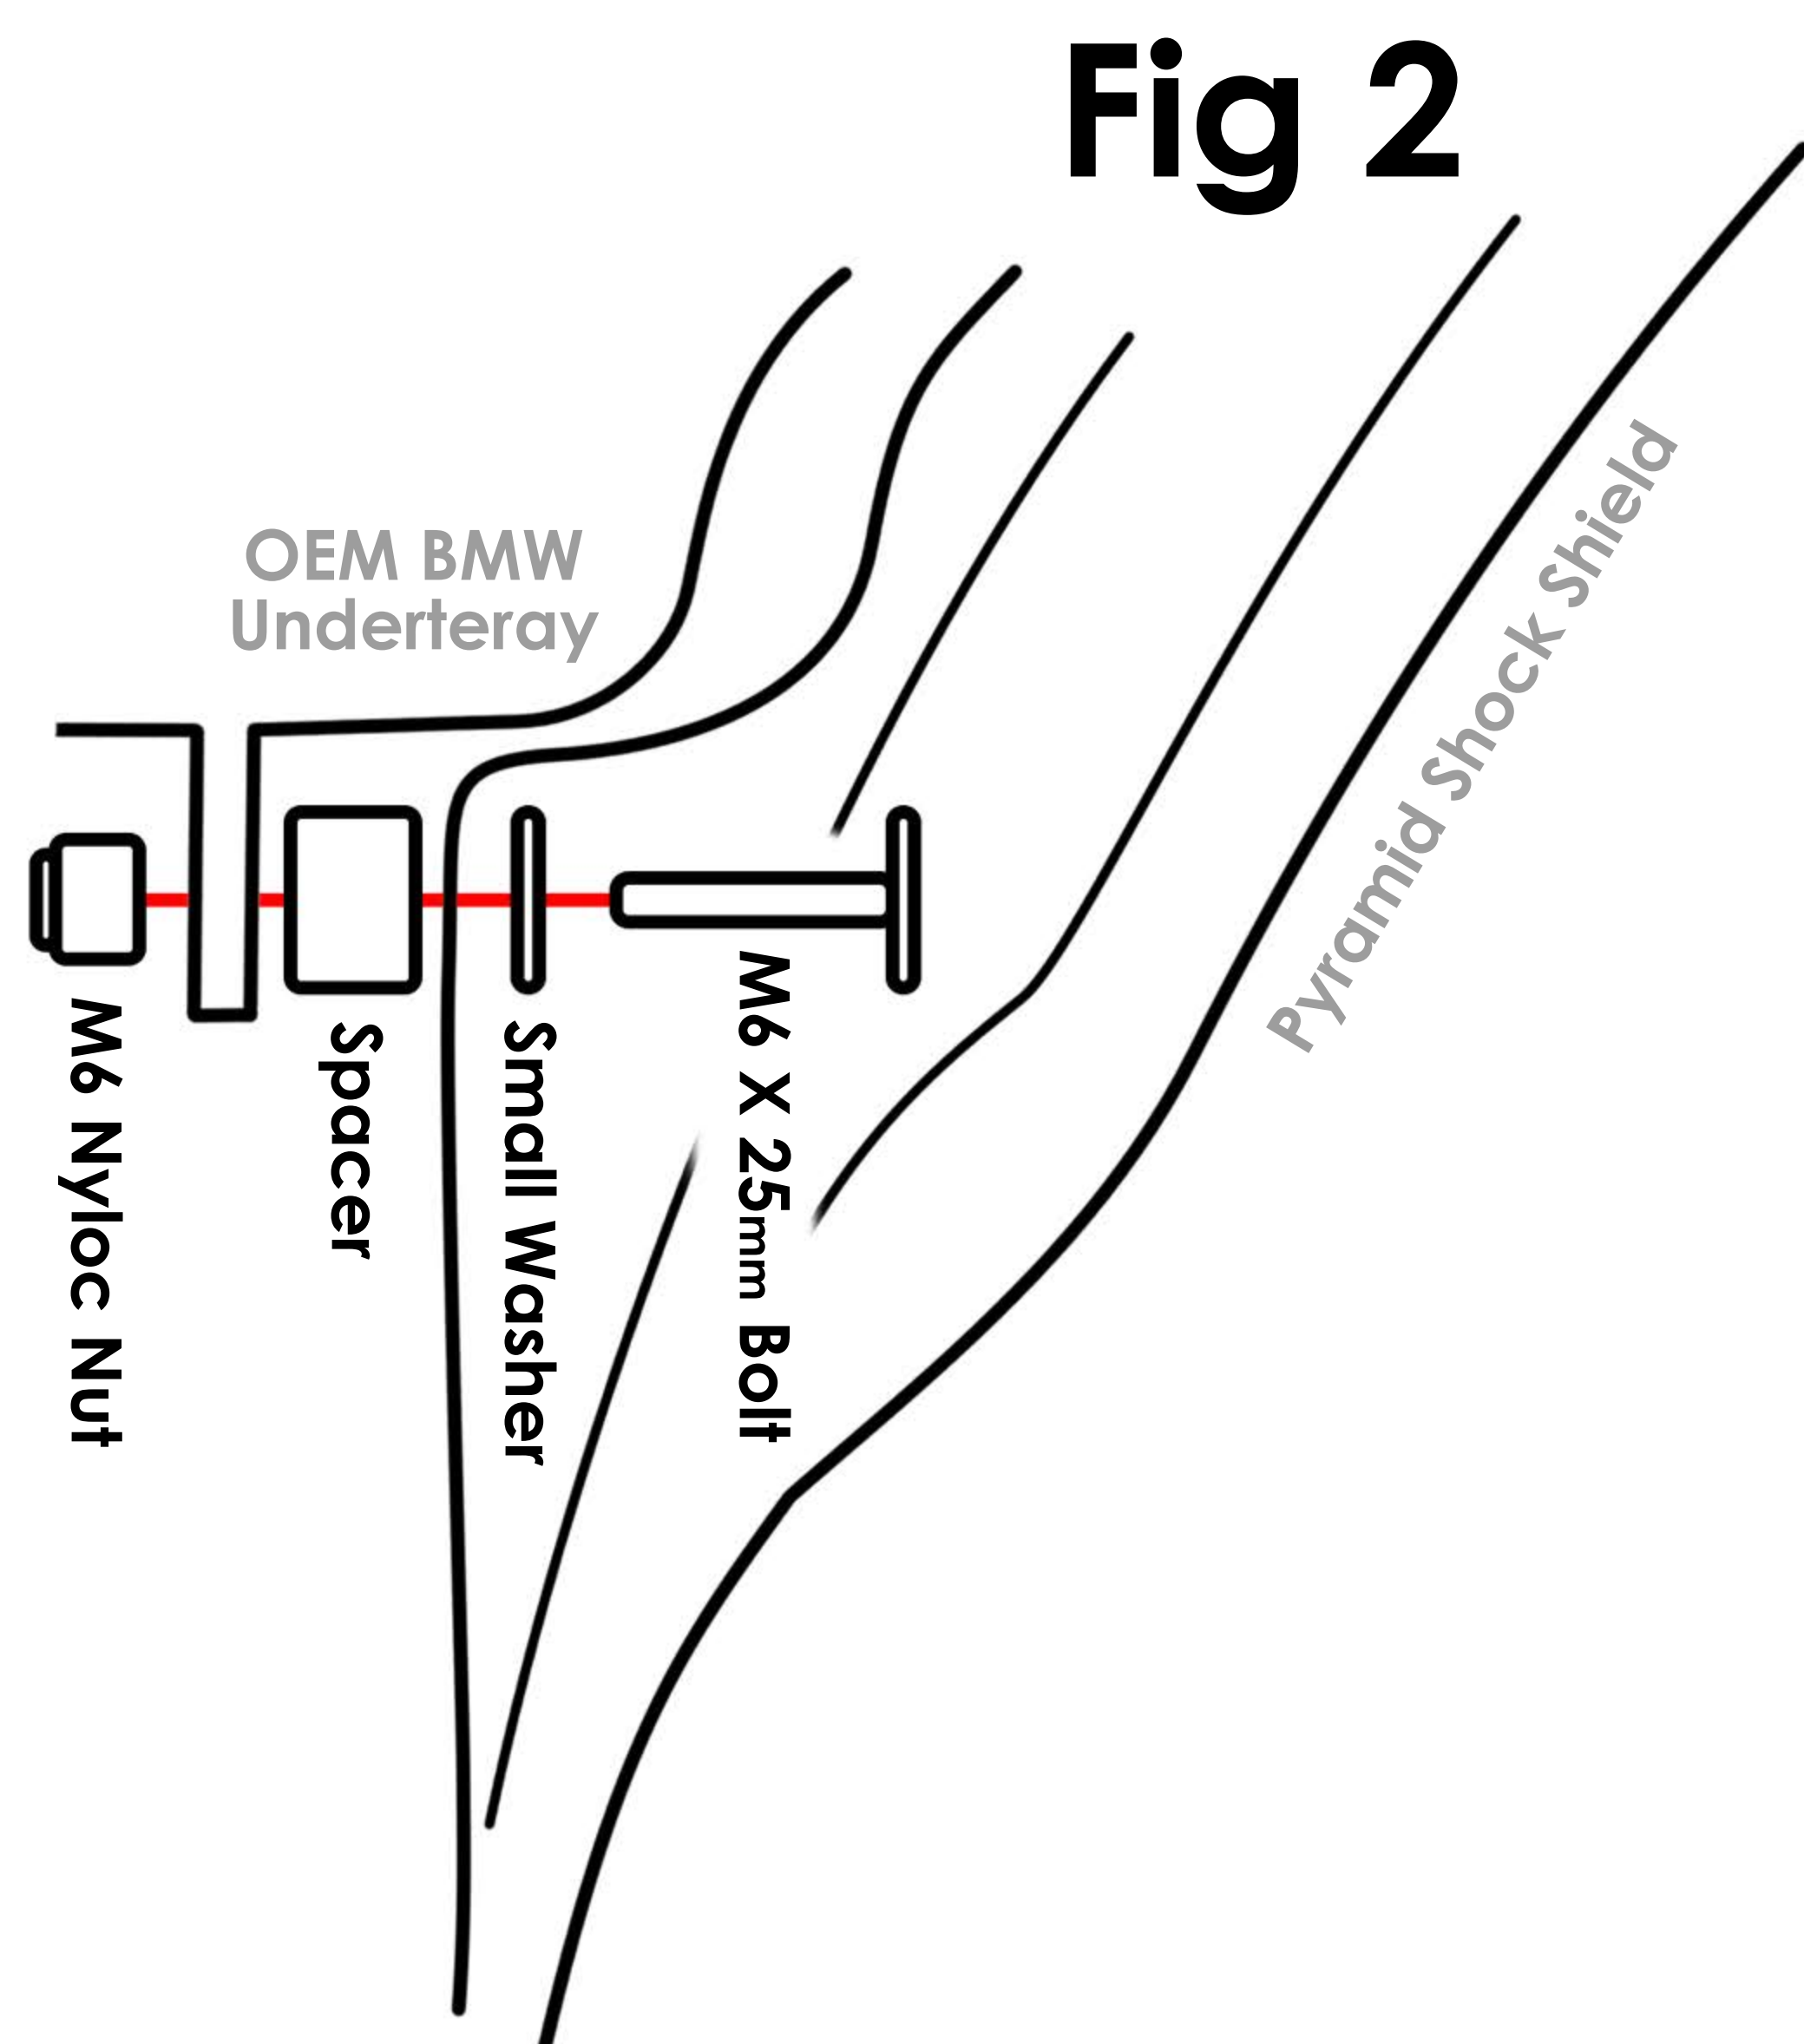


Fig 2



sales@pyramid-plastics.co.uk  
+44 (0)1427 677990  
www.pyramid-plastics.co.uk

Follow us on social media and feel free to leave us a review!

