



Hex ezCAN

Accessory manager for CAN-bus-equipped motorcycles

User manual

Edition 1.9
May 2023
Hex ezCAN Configuration Tool

1 TABLE OF CONTENTS

1	TABLE OF CONTENTS	2
2	WHAT CAN THE EZCAN DO?	3
3	INSTALLING FOR LIFE	5
3.1	Calculating power consumption	5
3.2	Generic installation	7
3.3	Before you wire your accessories	9
3.3.1	Connecting 2-wire accessories	10
3.3.2	Connecting 3-wire LED lights	11
3.4	Connecting power wiring	12
3.5	ezCAN registration	14
3.5.1	Registering the ezCAN	14
3.5.2	Re-registering the ezCAN	15
3.5.3	Registering manually	16
4	EZCAN INSTALLATION TUTORIALS	17
4.1	ezCAN installation instructions	17
4.2	ezCAN configuration instructions	17
5	HOW TO CONTROL YOUR EZCAN	18
5.1	Operating auxiliary front lights	18
5.1.1	BMW	18
5.1.2	Harley-Davidson	21
5.1.3	KTM	23
5.1.4	Honda	29
5.1.5	Triumph	31
5.1.6	Husqvarna	32
5.2	Adding and adjusting an auxiliary-light strobe delay on horn activation	33
5.3	All other ezCAN functions	33
5.3.1	Switching off front and rear auxiliary lights	34
5.3.2	Operating auxiliary rear/brake lights	34
5.3.3	Operating run/brake/turn lights	35
5.3.4	Operating 12-volt accessory power sockets	35
5.3.5	Operating auxiliary horns	36
5.3.6	Operating auxiliary turn signals	36
5.3.7	Operating heated gear	37
5.3.8	Disabling an ezCAN power circuit	37
5.4	Brand-specific functions	37
5.4.1	KTM ABS/bad fuel modes functionality	37
5.5	Brand-specific limitations	38
5.5.1	KTM	38
5.5.2	Husqvarna	38
5.5.3	Triumph Tiger 900	38
5.6	Importing and exporting your ezCAN setup configuration	39
6	IF SOMETHING GOES WRONG	40
6.1	What do the Status LED colours mean?	40
6.2	Using the ezCAN <i>Diagnostics</i> window	41
7	SPECIFICATIONS	45
8	NOTICES AND COPYRIGHT	46

2 WHAT CAN THE EZCAN DO?

Congratulations on your purchase of a Hex ezCAN! We wish you many years of trouble-free service and exciting riding. We aim to boost the rideability and usability of your motorcycle, and the safety, comfort and pleasure of your riding experience. The only practical limit to what ezCAN can do for you is your imagination!

The ezCAN is an accessory manager for CAN-bus equipped motorcycles, ATVs and other vehicles. It connects directly to the battery, sidestepping the electrical power restriction issues of the latest motorcycles. It continuously monitors the data transmitted on the CAN-bus (a small selection of the monitored data includes engine speed, vehicle speed, status of brake lights and brake pedals/levers, horn status, gear position, throttle position, headlight and switch status, and turn signal status). The ezCAN uses these messages to control the individually configured accessories connected to its power outputs.

The ezCAN has four highly configurable multi-purpose power outputs. The four outputs have identical power-supply capability, and are colour-coded **Red**, **Blue**, **Yellow** and **White** (below).



The **White** output is also capable of functioning as a LIN (Local Interconnect Network) bus for future expandability.

The Hex ezCAN is capable of powering any 12-volt electrical accessory with a current draw of up to 25 Amps¹. In practice, ezCAN can power all electrical accessories used in modern motorcycling. This includes (but is not limited to):


- One or more sets of high-powered auxiliary front LED lights.
- Auxiliary rear running lights and brake lights.
- High-powered air horns.
- Auxiliary front daytime running lights/turn signals.
- Combined rear run/brake/turn signals.

¹ For a full description of the ezCAN's functional specifications, see [SPECIFICATIONS](#).

- Marker lights.
- Heated gear.
- Action cameras.
- Switched 12V outlets supplying power to mobile phones, satellite-navigation devices, and so on.

You are not limited to a specific role per power circuit: any 12V accessory of any type can be assigned to any power circuit.

The possibilities are so broad that we recommend you devote some thought to function and configuration. One common installation scenario (below) includes a circuit powering two front spotlights (blue circuit), another circuit powering two more front spotlights (yellow circuit), a circuit powering an auxiliary rear light (red circuit), and a circuit powering a high-power accessory horn (white circuit, shown in black for clarity).

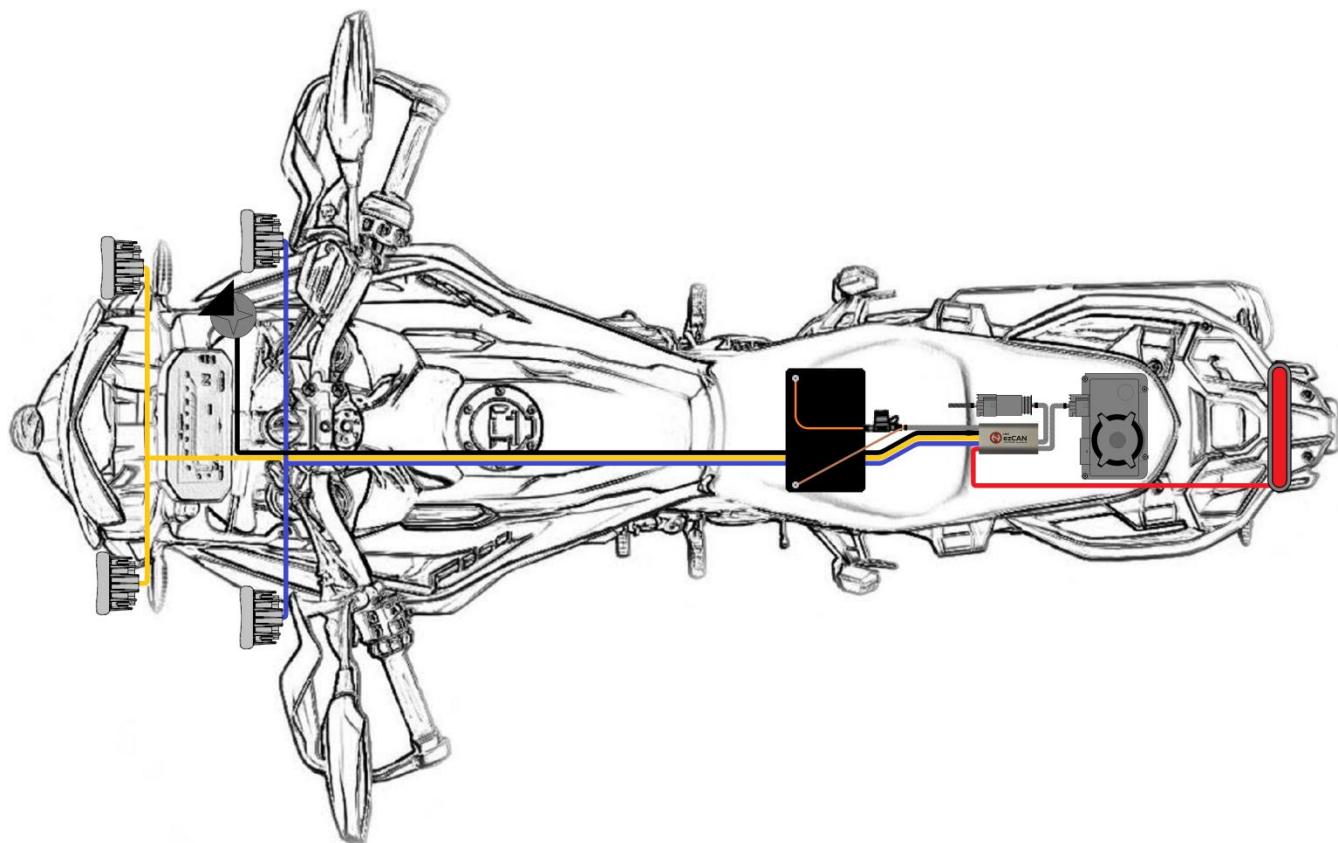

But you are not confined to this layout. Many ezCAN customers have created truly imaginative scenarios, all of which have enhanced their personal riding experience.

3 INSTALLING FOR LIFE

To install your ezCAN in a way that ensures optimum, trouble-free performance in all conditions, you must:

1. **Protect the main body from damage.** Where you install the silver body of the ezCAN depends on what space is available. Install the ezCAN's main body where it will be protected from crushing, impacts and vibration. Although the ezCAN is highly water resistant, try not to expose it to water spray from the wheels or from high-pressure cleaning equipment.
2. **Ensure easy diagnostics.** With the ezCAN installed and secured, make sure you have easy access to the Status LED, and the ezCAN's main fuse.
3. **Mount the main body securely.** If you use the Velcro strips supplied with the kit, first clean the silver body and your planned mounting point with methyl alcohol. Otherwise, secure the main body to a frame tube or other solid component using medium-sized zip ties.
4. **Protect the wiring.** When routing the ezCAN wiring to the battery, CAN-bus connector, accessory power points and other connections, run the wiring next to existing wiring, under body panels, and behind frame tubes. Make sure all wiring is kept well clear of moving components (such as fork stanchions, steering triple clamps and swingarms), and is not in danger of being cut, abraded or overheated.
5. **Secure the wiring.** Securely fasten all ezCAN and accessory wiring to frame tubes or non-moving components with zip ties. Do not over-tighten the zip ties.

For generic installation instructions covering most compatible motorcycles, see [Generic installation](#).

For specific instructions on where and how to install ezCAN on BMW, Harley-Davidson, KTM, Honda, Triumph and Husqvarna motorcycles, [click here](#).

3.1 Calculating power consumption



WARNING

Make sure that all amperage cut-off limits are set correctly. If this is not done, current overload conditions could damage your accessories or cause electrical fires.


You must correctly set the cut-off amperage limit for each ezCAN power circuit you use. Setting these limits too high will make them ineffective, possibly causing dangerous over-current conditions. Setting the limits too

low may trip power circuits for no good reason (this is known as *nuisance tripping*).

The ezCAN features software amperage limits that act in the same way as normal fuses. These 'software fuses' are based on the *accumulated energy* principle. This means they take the severity of an over-current condition into account and act accordingly. In practice, this means they will not trip in the first fraction of a second in which an amperage limit has been exceeded, but will act upon the continuing energy of the event. This means ezCAN can intelligently handle small current spikes without nuisance tripping.

If a circuit draws more than the amount of current you specify, the ezCAN will cut the power supply to that circuit. To reset a circuit that has 'tripped' in this way, cycle the ignition (switch the motorcycle's ignition switch OFF, then switch it back ON).

Any of the software fuses can be set to a trip point between 1 and 25 Amps (below).

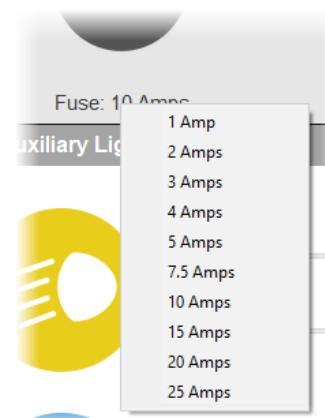

Calculate the safe cut-off amperage limit for each power circuit by doing the steps that follow:

1. Find out how much *continuous current* (in Amps) your accessory uses at full power (value **X**).
2. Calculate the *total amperage limit* (value **I**) for the circuit by adding a 30% margin to value **X**, using this formula:

$$I = (X + 30\%)$$



TIP

For larger electrical loads, it may be advisable to use a lower margin.

If you are using a margin lower than 30%, and a power circuit 'trips' repeatedly, increase the margin.

3. Assign the closest software fuse setting *above* value **I** to the circuit, using the procedure [shown here](#).
 - As a typical example, you might want to connect a run/brake light with a maximum current draw of 1.8 Amps

to a power circuit. Adding 30% to this yields 2.34 Amps. This means the 3 Amp setting must be chosen to protect the circuit.

If you do not know the Amperage draw of the accessory:

1. Find out the maximum amount of power (in Watts) the accessory uses at full power (value **P**).
2. If a single output circuit must power two or more accessories (such as auxiliary lights), calculate the total value of **P** by adding the total wattage of the accessories together.
3. Calculate the *nominal amperage* (value **Y**) for the circuit. Do this by dividing value **P** by the twelve volts of the motorcycle's electrical system (value **V**), using this formula:

$$Y = \frac{P}{V}$$

4. Calculate the *total amperage limit* (value **I**) for the circuit. Do this by adding a 30% margin to value **Y**, using this formula:

$$I = (Y + 30\%)$$

- As a typical example, you might want to connect two auxiliary front lights consuming 40 Watts each to the power circuit, in parallel. The calculation for this scenario would be:

$$I = \left(\frac{(40 + 40)}{12} \right) + 30\% = 8.7 \text{ Amps}$$

Adding 30% to 6.67 Amps yields 8.67 Amps. This means the 10 Amp setting must be chosen to protect the circuit.



IMPORTANT

The ezCAN has a 30 Amp inline fuse.

The combined maximum current limit for all four power circuits must not exceed 30 Amps. The main fuse may blow if the ezCAN draws more than this amount of current.

It is recommended that you keep the combined maximum current limit under 25 Amps.

To learn how to set value **I** for each power circuit using the ezCAN configuration software, [click here](#).

3.2 Generic installation



CAUTION

Follow the installation sequence in this section carefully, and do not skip any steps.

Your ezCAN is a precision component and must be fitted with care and attention. The installation sequence in this section is designed to make installation easy, and to prevent fault codes being logged by any of the motorcycle's control units.

1. Switch the motorcycle's ignition OFF.
2. Remove the negative terminal (–) from the motorcycle's battery.
3. Remove the positive terminal (+) from the motorcycle's battery.
4. Connect the ezCAN to the correct CAN-bus connections.



IMPORTANT

If you are installing the ezCAN on a BMW that does not have an anti-theft alarm (DWA) module fitted, the BMW will have a DWA blanking plug containing a CAN-bus terminating resistor.

After disconnecting the DWA blanking plug from the female DWA wiring harness connector, it is extremely important that you connect the blanking plug to the female ezCAN wiring harness connector. This ensures that the terminating resistor is connected to the CAN-bus.

- On all liquid-cooled BMW R-series models from 2013 onward, connect the male ezCAN CAN-bus connector to the tyre-pressure monitoring module or blanking plug, and the corresponding module connector.
- On all other BMW models, connect the male ezCAN CAN-bus connector to the anti-theft alarm module or blanking plug, and the corresponding module connector.
- On all Harley-Davidson, KTM, Triumph Tiger 900, 2022-onward Triumph Tiger 1200, and Husqvarna Norden 901 models, connect the ezCAN CAN-bus connector to the motorcycle's diagnostic connector.
- On the Honda CRF1100 Africa Twin, connect the ezCAN CAN-bus connector to the Inertial Measurement Unit (IMU) connector located under the rear edge of the fuel tank.

5. Connect the orange ezCAN power cable to the battery's positive terminal (+).
6. Connect the brown ezCAN power cable to the battery's negative terminal (–). Always re-connect the negative terminal last.
7. To learn how to configure your ezCAN, [click this link](#).
8. Connect your accessories to the ezCAN power circuits as shown in the sub-sections below. Pay attention to the output circuit colours, making sure you configure each output circuit to power the correct accessory.
9. Switch the motorcycle's ignition ON.

10. Test that each accessory is working as expected, fine-tuning the cut-off amperage limit for each power circuit as needed.

3.3 Before you wire your accessories...




IMPORTANT

Not all accessories use red cables for 12V+ or brown cables for Ground. If you do not know what one or more wires on your accessory are for, ask the manufacturer for the accessory's *pinouts* (terminal assignments).

The ezCAN kit includes four 2-wire stub connectors, four PWM control wires with male terminal, four rubber stoppers, and two male blanking plugs. Use the blanking plugs to cover all power output plugs you will not be using.

The power output plug shown below is a typical female output plug found on the ezCAN. Each ezCAN power circuit has three wires:

- **A solid red, blue, yellow or white wire** (lower right terminal, below). This is the 12V+ wire.
- **A wire of the same colour as the solid-coloured wire, with white or black tracer** (lower left terminal, below). This is the pulse-width modulation (PWM/data) control wire. It is used for controlling light intensity if the accessory is a three-wire light.
- **A black wire** (upper terminal, below). This is the Ground or negative return wire.

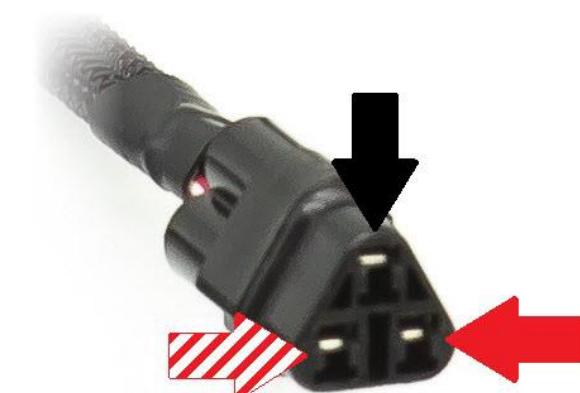

Note the position of each terminal (the *pinouts*). The following subsections will use this information to show you how to connect specific accessories.



TIP

On the *White* power circuit, the PWM/data control wire also serves as a Local Interconnect Network (LIN-bus) channel.

In future, this channel will be used for expansion, and to accommodate intelligent accessories.

It is important that you pay close attention when connecting your accessories to the ezCAN's output circuits. Use the ezCAN power circuits and stub connectors as shown in the following sub-sections.

3.3.1 Connecting 2-wire accessories

If the accessory you are installing only has two wires, read this section. If you are installing accessory LED lights with three wires, refer to [Connecting 3-wire LED lights](#).

Most accessories have two wires: a 12V supply wire, and a second wire for Ground return. Some typical examples are:

- 12-volt power for accessories (GPS, phones, action cameras, and so on)
- High-power LED lights with two-wire connections
- Run/Brake/Turn lights
- Auxiliary rear lights
- Daytime running rights (DRLs) and marker lights
- Air horns
- Heated riding gear

Join the wiring of a two-wire accessory to an ezCAN stub connector by doing the steps that follow:

1. Push one of the included rubber stoppers firmly into the rear of the stub connector's empty terminal cavity (below). Make sure the stopper is properly seated.



2. Connect the accessory's 12V+ cable to the **solid-coloured orange** wire on the stub connector (below).



3. Connect the accessory's Ground cable to the **black wire** on the stub connector (below).



4. If the accessory is a two-wire LED light, switch OFF **Three-Wire Dimming Mode** in the correct **Auxiliary Lights** section of the ezCAN configuration software (below).



IMPORTANT

If **Three-Wire Dimming Mode** is not switched OFF for two-wire lights, the lights will remain at full brightness regardless of their brightness setting.

3.3.2 Connecting 3-wire LED lights

If you are installing accessory LED lights that have three wires, read this section. If the accessory you are installing has two wires, refer to [Connecting 2-wire accessories](#).

In addition to Power and Ground, some LED lights have a third wire that is used to control the light's brightness. This is done using a low-power pulse width modulation (PWM) control signal.


Join the wiring of a three-wire LED light to an ezCAN stub connector by doing the steps that follow:

1. Note the position of the empty terminal cavity on the stub connector, and the orientation of the male terminal of the PWM control wire that will be inserted into the stub connector (below).



2. Push the male terminal of a PWM control wire firmly into the rear of the stub connector's empty terminal cavity, making sure the terminal is oriented as seen above.
 - The terminal should 'Click' into the stub connector.

3. Connect the auxiliary light's 12V+ wire to the **solid-coloured orange** wire on the stub connector (below).

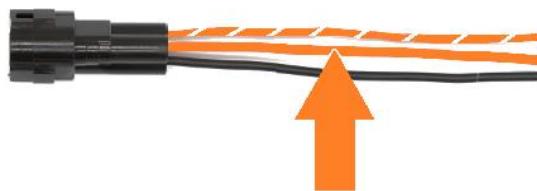

4. Connect the auxiliary light's Ground wire to the **black wire** on the stub connector (below).



5. Connect the auxiliary light's PWM/data brightness-control wire to the **orange-and-white wire** on the ezCAN stub connector (below).



6. Switch ON **Three-Wire Dimming Mode** in the correct **Auxiliary Lights** section of the ezCAN configuration software (below).



IMPORTANT

If **Three-Wire Dimming Mode** is not switched ON for three-wire lights, the lights may flicker or 'stutter' when their brightness is adjusted, or their brightness adjustment may 'jump' between the low and high settings.

3.4 Connecting power wiring

When connecting accessories to the ezCAN stub connectors, we suggest you use one of the following methods:

- It is strongly recommended that you use *solder seal wire connectors*. This is a special configuration of heat-shrink tubing with a watertight seal on both ends, and a low-temperature solder ring in the middle. A typical example is shown below.



- If you cannot obtain solder seal wire connectors, use traditional soldered joints (below).



Cover each soldered joint with a generous section of heat-shrink tubing (below). Insulation tape is not recommended.

**TIP**

Some types of heat-shrink tubing have an interior coating of adhesive. This type of tubing is preferred, as it improves water resistance.

When connecting the power wiring of an accessory to an ezCAN stub connector, do the steps that follow:

1. Install the ezCAN and all accessories on the motorcycle.
2. Measure the length of each planned power circuit wiring run.
3. If needed, extend the stub connectors by adding more wiring between each terminal of the accessory. Alternatively, consider using the ezCAN extension kit (unassembled view below left, assembled view below right).



To purchase an ezCAN extension kit from the Hex Innovate online store, [click here](#).



WARNING

If an accessory connects to a power outlet (for example, a Hella plug), make sure the accessory's power cord cannot interfere with control of the motorcycle, and cannot entangle you when you get onto and off of the motorcycle.

3.5 ezCAN registration



IMPORTANT

Registration brings these essential benefits:

- Support and warranty cover will be enabled for your ezCAN.
- You will have access to the latest device firmware updates.
- You can also choose to stay informed of the latest software functionality. ezCAN functionality is continually upgraded, and the ability to control intelligent accessories is planned for ezCAN in future.

Note that ezCAN product support is only available to users who have registered. The registration procedure allows ezCAN owners to access the full benefits of ezCAN ownership.

3.5.1 Registering the ezCAN

To register your ezCAN, do the steps that follow:

1. Connect your computer to the internet.
2. Remove the rubber plug covering the ezCAN's Micro-USB port.
3. Connect the ezCAN to your computer.
4. Launch the ezCAN Configuration Tool from your computer.

- If this is not the first time your ezCAN is connected to the internet, the ezCAN configuration software will be shown.
- If this is the first time your ezCAN is connected to the internet, the **ezCAN Registration** dialogue will be shown.

5. If the **ezCAN Registration** dialogue is shown, follow the prompts.
 - Your browser will show the **Hex ezCAN Registration** form.
6. Enter all needed information, including a valid E-mail address.
7. Click the **Submit** button.
 - A verification E-mail will be sent to your E-mail address.



IMPORTANT

It may take several minutes to receive the verification E-mail. If you do not receive the verification E-mail after this time, check your E-mail account's anti-spam settings and Spam folder. The verification E-mail has the following delivery address and subject line:

From: noreply-signup@hexcode.co.za

Subject: ezCAN Registration

If you have not received the verification E-mail after one hour, contact support@hexezcan.com for help.

8. Click the verification link in the body of the E-mail.
 - Registration is now complete, and support and warranty cover are active for your ezCAN.

3.5.2 Re-registering the ezCAN

If you need to change your ezCAN registration details, or if you have purchased a used ezCAN and want to register it in your name, do the steps that follow:

1. Click the Extra Settings button in the upper right corner of the ezCAN configuration software (below).

2. Click the **About** option in the drop-down menu.
 - The **ezCAN Version details** dialogue will be shown.
3. Click the **Update Registration Details** button.
 - The **ezCAN Registration** dialogue will be shown.
4. Complete the **ezCAN Registration** dialogue as shown in [Registering the ezCAN](#).

3.5.3 Registering manually

If for any reason you cannot register using the **ezCAN Registration** dialogue, register manually by going to [this page](#) and filling in your details.

4 EZCAN INSTALLATION TUTORIALS

A number of video tutorials are available for every ezCAN-related topic. To see relevant video tutorials, click the links below.


Videos are added on a regular basis. Please visit www.hexezcan.com to see the latest additions.

4.1 ezCAN installation instructions

The ezCAN installation video tutorials give specific, easy-to-follow instructions. For instructions on how to install an ezCAN on any compatible motorcycle, [click here](#).

4.2 ezCAN configuration instructions

You will see the view below when you click the configuration icon for any power output circuit.

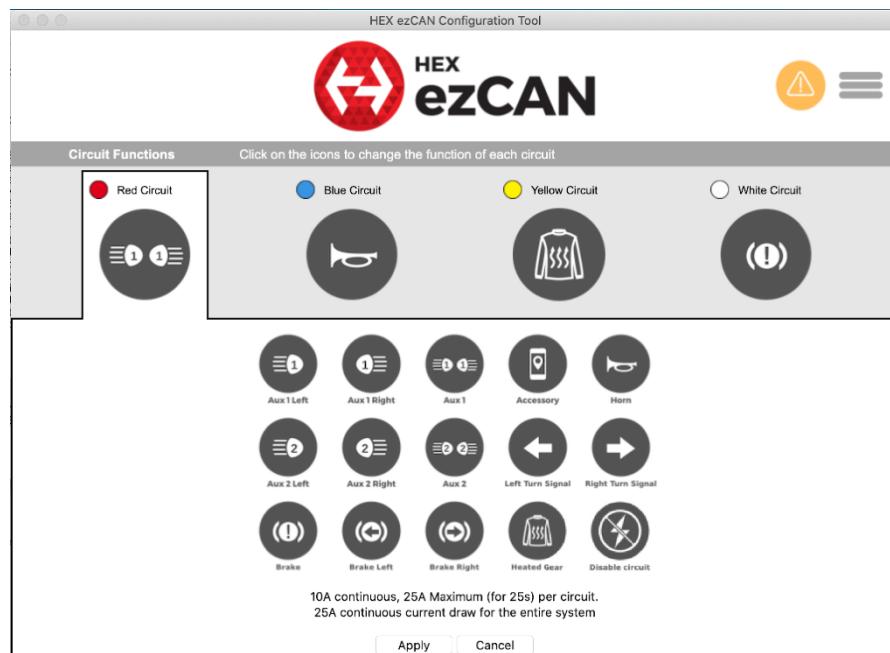

You can assign any of the configuration options above to each of the power output circuits.

Some software configuration instructions may differ, depending on motorcycle make and model. Configuration instructions are available for all compatible motorcycles. To learn how to configure your ezCAN, [click here](#).

5 HOW TO CONTROL YOUR EZCAN

Some aspects of ezCAN operation differ depending on motorcycle make and model. This section contains all rider actions needed to switch on, adjust, and switch off all functions on all compatible motorcycles.



IMPORTANT

The ezCAN will need to be configured before it works in exactly the way you want it to.

For detailed instructions on how to configure the ezCAN using the ezCAN configuration software, [click here](#).

Some rider actions may give different results, depending on how the ezCAN is configured. To learn how to configure your ezCAN using the configuration software, [click here](#).

In all cases, the motorcycle's ignition switch must be ON.



WARNING

For safety reasons, it is strongly recommended that you stop the motorcycle and select *Neutral* gear before switching on, adjusting or switching off auxiliary front lights.

If your KTM does not have an optional Hex light switch installed, it is not possible to adjust auxiliary front lights, or switch them ON or OFF, while the motorcycle is moving.

5.1 Operating auxiliary front lights

5.1.1 BMW

5.1.1.1 All Motorcycles with Multi-Controller

If an ezCAN is installed on any compatible BMW model with a rotary Multi-Controller on the left-side handlebar controls, the ezCAN is controlled using the Multi-Controller.

Switching on and adjusting Aux 1 lights only	<ol style="list-style-type: none"> 1. Hold the Multi-Controller LEFT until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Rotate the Multi-Controller UP to increase light brightness by 10% per click (to a maximum of 100%), or DOWN to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the Multi-Controller for more than 5 seconds.
--	--

Switching on and adjusting Aux 2 lights only	<ol style="list-style-type: none"> 1. Hold the Multi-Controller RIGHT until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Rotate the Multi-Controller UP to increase light brightness by 10% per click (to a maximum of 100%), or DOWN to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the Multi-Controller for more than 5 seconds.
Switching off Aux 1 lights only	Press and hold the turn-signal cancel button for more than 3 seconds. The state of the lights persists even if the ignition is cycled.
Switching off Aux 2 lights only	Click the turn-signal cancel button three times. The state of the lights persists even if the ignition is cycled.
Switching off all front and rear auxiliary lights	Press and hold the turn-signal cancel button for more than 5 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.

5.1.1.2 Enabling and disabling front auxiliary light control functionality

If for any reason you do not want the BMW Multi-Controller and/or the turn-signal cancel (TSC) button to be able to adjust front auxiliary lights, you can disable the ezCAN control functionality of either or both of these controls.



IMPORTANT

Disabling ezCAN control functionality for the MultiController and/or the TSC button does not affect their standard BMW control functions.

To enable or disable ezCAN control functionality for the BMW Multi-Controller and/or the BMW TSC button, do the steps that follow:

1. Click the drop-down menu button in the upper right corner of the **Auxiliary Lights One** or **Auxiliary Lights Two** sections (below).



2. Click the **Extra Settings** option.

- The auxiliary lights Extra Settings menu will be shown. Look for the following section:

Vehicle controls

- Wonderwheel control enabled
- Turn Signal Cancel enabled

- Both the switches are *enabled* (blue) by default.

3. To enable or disable the BMW Multi-Controller's ezCAN control functionality, click the **Wonderwheel control enabled** switch.
4. To enable or disable the BMW TSC button's ezCAN control functionality, click the **Turn Signal Cancel enabled** switch.

5.1.1.3 All Motorcycles without Multi-Controller

If an ezCAN is installed on any compatible BMW model without rotary Multi-Controller, the ezCAN is controlled using the **INFO** button on the left-side handlebar controls.

Switching on and adjusting Aux 1 lights only	<ol style="list-style-type: none"> 1. Press and hold the left switchgear INFO button until all auxiliary front lights flash twice. <ul style="list-style-type: none"> • The auxiliary front lights are now in brightness-adjustment mode. 2. Release the INFO button. 3. Briefly press and release the INFO button to adjust light brightness. <ul style="list-style-type: none"> • Each press will brighten the Aux 1 lights by 10% to a maximum of 100%, then roll brightness through to 0% (OFF). • You can repeat this cycle as many times as you need. 4. Exit brightness-adjustment mode by not operating the INFO button for more than 5 seconds.
Switching on and adjusting Aux 2 lights only	<ol style="list-style-type: none"> 1. Press and hold the left switchgear INFO button until all auxiliary front lights flash twice. <ul style="list-style-type: none"> • The auxiliary front lights are now in brightness-adjustment mode. 2. Release the INFO button. 3. Pull in and hold the clutch lever. 4. Briefly press and release the INFO button to adjust light brightness. <ul style="list-style-type: none"> • Each press will brighten the Aux 2 lights by 10% to a maximum of 100%, then roll brightness through to 0% (OFF). • You can repeat this cycle as many times as you need. 5. Release the clutch lever. 6. Exit brightness-adjustment mode by not operating the INFO button for more than 5 seconds.
Switching off Aux 1 lights only	Press and hold the left switchgear INFO button for more than 7 seconds. The state of the lights persists even if the ignition is cycled.
Switching off Aux 2 lights only	<ol style="list-style-type: none"> 1. Pull in and hold the clutch lever. 2. Press and hold the left switchgear INFO button for more than 7 seconds. The state of the lights persists even if the ignition is cycled.
Switching off all front and rear auxiliary lights	Press and hold the left switchgear INFO button for more than 10 seconds.

Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.
---	--


5.1.2 Harley-Davidson

5.1.2.1 ezCAN Laconia

Applicable models:

- Pan America 1250

The ezCAN is controlled using the *Navigate Left/Right buttons* (red arrows, below), *Navigate Up/Down buttons* (blue arrows, below) and turn-signal cancel button (green arrow, below) on the left-side handlebar controls.

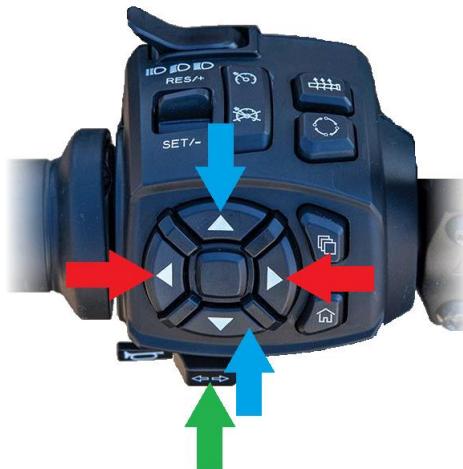

The *Navigate Left/Right buttons*, *Navigate Up/Down buttons* and *Turn-signal cancel button* referred to in this section are located on the Pan America's left-side handlebar controls. See the image above for details.

Adjusting Aux 1 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Navigate Left</i> button until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Navigate Up</i> button to increase light brightness by 10% per click (to a maximum of 100%), or press and release the <i>Navigate Down</i> button to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Navigate</i> buttons for more than 5 seconds.
------------------------	---

Adjusting Aux 2 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Navigate Right</i> button until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Navigate Up</i> button to increase light brightness by 10% per click (to a maximum of 100%), or press and release the <i>Navigate Down</i> button to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Navigate</i> buttons for more than 5 seconds.
Toggling Aux 1 lights On and Off	Press and hold the turn-signal cancel button for more than 3 seconds. The state of the lights persists even if the ignition is cycled.
Toggling Aux 2 lights On and Off	Click the turn-signal cancel button three times. The state of the lights persists even if the ignition is cycled.
Temporarily switching off all front and rear auxiliary lights	Press and hold the turn-signal cancel button for more than 10 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.



NOTES

If all front and rear auxiliary lights are temporarily switched off using the turn-signal cancel button (see table above for details), the ezCAN will turn the rear auxiliary lights back on:

- When the Aux 1 or Aux 2 lights are turned back on.
- After the ignition switch is cycled.

If any front auxiliary lights are switched off using the *Toggle On/Off* functionality, the Off state of the front auxiliary lights will persist even if the ignition switch is cycled.

5.1.2.2 ezCAN Daytona

Applicable models:

- *Softail* series
- *Cruiser* series
- *Sportster* series
- *Dyna* series
- *Trike* series
- *Touring* series

The ezCAN is controlled using the *TRIP* or *trigger* button on the left-side handlebar controls.

Switching on and adjusting Aux 1 lights only	<ol style="list-style-type: none"> 1. Press and hold the left switchgear TRIP or trigger button until all auxiliary front lights flash twice. <ul style="list-style-type: none"> • The auxiliary front lights are now in brightness-adjustment mode. 2. Release the TRIP or trigger button. 3. Briefly press and release the TRIP or trigger button to adjust light brightness. <ul style="list-style-type: none"> • Each press will brighten the Aux 1 lights by 10% to a maximum of 100%, then roll brightness through to 0% (OFF). • You can repeat this cycle as many times as you need. 4. Exit brightness-adjustment mode by not operating the TRIP or trigger button for more than 5 seconds.
Switching on and adjusting Aux 2 lights only	<ol style="list-style-type: none"> 1. Press and hold the left switchgear TRIP or trigger button until all auxiliary front lights flash twice. <ul style="list-style-type: none"> • The auxiliary front lights are now in brightness-adjustment mode. 2. Release the TRIP or trigger button. 3. Pull in and hold the clutch lever. 4. Briefly press and release the TRIP or trigger button to adjust light brightness. <ul style="list-style-type: none"> • Each press will brighten the Aux 2 lights by 10% to a maximum of 100%, then roll brightness through to 0% (OFF). • You can repeat this cycle as many times as you need. 5. Release the clutch lever. 6. Exit brightness-adjustment mode by not operating the TRIP or trigger button for more than 5 seconds.
Switching off Aux 1 lights only	Press and hold the left switchgear TRIP or trigger button for more than 7 seconds. The state of the lights persists even if the ignition is cycled.
Switching off Aux 2 lights only	<ol style="list-style-type: none"> 1. Pull in and hold the clutch lever. 2. Press and hold the left switchgear TRIP or trigger button for more than 7 seconds. The state of the lights persists even if the ignition is cycled.
Switching off all front and rear auxiliary lights	Press and hold the left switchgear TRIP or trigger button for more than 10 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.

5.1.3 KTM

Two different ezCANs have been released for KTM:

- **ezCAN II for KTM** (full support for all 1050, 1090, 1190 and 1290 models up to model year 2020; partial support for 790 models.)
- **ezCAN II Gobi for KTM** (full support for all 1290 models from model year 2021 onward, and for all 890 models from model year 2020 onward.)


**NOTE**

Due to limitations in their electronic platforms, KTM 790 and 890 models are subject to ezCAN functionality limitations. For a list of the functional ezCAN limitations, [click here](#).

5.1.3.1 ezCAN II Gobi (2021+ KTM 1290 models)

If an *ezCAN II Gobi for KTM* is installed on a 2021-onward KTM 1290 model:

- The ezCAN is controlled using the *UP* and *DOWN* buttons (red arrows, below) and turn-signal cancel button (green arrow, below) on the left-side handlebar controls.

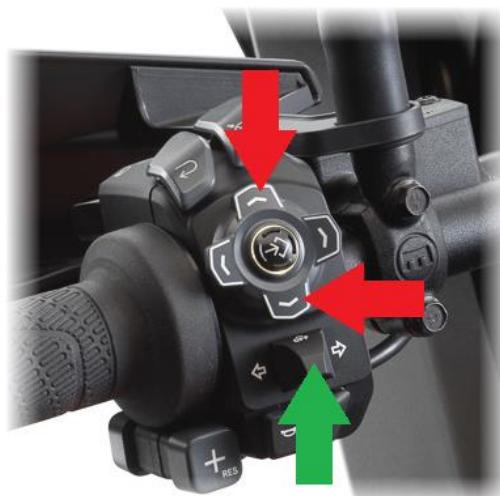

- The ezCAN does not need a separate auxiliary light control switch.

5.1.3.2 Controlling Aux 1 and Aux 2 lights on a KTM 1290 (2021+ models only)

The *UP*, *DOWN* and *TSC* buttons referred to in this section are located on the motorcycle's left-side handlebar controls.

Switching on and adjusting Aux 1 lights only	<ol style="list-style-type: none"> 1. Press and hold the UP button until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Briefly press and release the UP button to increase light brightness by 10% per click (to a maximum of 100%), or the DOWN button to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the UP or DOWN buttons for more than 5 seconds.
--	--

Switching on and adjusting Aux 2 lights only	<ol style="list-style-type: none"> 1. Press and hold the DOWN button until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Briefly press and release the UP button to increase light brightness by 10% per click (to a maximum of 100%), or the DOWN button to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the UP or DOWN buttons for more than 5 seconds.
Switching off Aux 1 lights only	Press and hold the turn-signal cancel button for more than 3 seconds. The state of the lights persists even if the ignition is cycled.
Switching off Aux 2 lights only	Click the turn-signal cancel button three times. The state of the lights persists even if the ignition is cycled.
Switching off all front and rear auxiliary lights	Press and hold the turn-signal cancel button for more than 10 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.

5.1.3.3 Controlling Aux 1 and Aux 2 lights on all other KTM models

For all models other than 2021+ 1290 models, operation of *ezCAN II for KTM* and *ezCAN II Gobi for KTM* varies depending on whether an auxiliary light control switch is installed. If an auxiliary light control switch is installed, ezCAN operation also varies depending on switch type:

- To operate front auxiliary lights if no accessory switch is installed, see [If no aftermarket Aux light switch is installed](#).
- To operate front auxiliary lights if a Hex UP-DOWN switch is installed, see [If the Hex UP-DOWN switch is installed](#).
- To operate front auxiliary lights if a single-button switch is installed, see [If an aftermarket single-button switch is installed](#).



IMPORTANT

If the *ezCAN II Gobi for KTM* is fitted to a KTM 890 model, the ezCAN cannot currently be fitted with a Hex UP-DOWN switch, or an aftermarket single-button Aux light switch. To control Aux 1 and Aux 2 lights on KTM 890 models, see [Switching Aux 1 and Aux 2 lights independently](#).

A dedicated *Hex LIN button* will be made available for these models in the near future.

5.1.3.3.1 Switching Aux 1 and Aux 2 lights independently

If a Hex UP-DOWN switch is not installed (in other words, a single-button switch is installed, or no switch is installed), only the Aux 1 circuit can be switched on and off. The ezCAN Configuration Tool contains a KTM-

specific feature that allows you to switch the Aux 2 circuit simultaneously with the Aux 1 circuit. (In other words, the on/off condition of the Aux 2 circuit *mimics* the Aux 1 circuit).

This feature is used if:

- A single-button auxiliary light switch is installed (in other words, the on/off condition and brightness can only be controlled for the Aux 1 circuit), or
- No accessory light switch is installed (in other words, the on/off condition and brightness can only be controlled for the Aux 1 circuit, and then only using the motorcycle's DRL menu).

If the Hex UP-DOWN switch is installed, this feature is not used. The Hex UP-DOWN switch is used to independently switch Aux 1 *and* Aux 2 light circuits on and off, and individually control the brightness for each circuit.


To choose whether the Aux 2 lights switch on or off based on how the Aux 1 lights are commanded, do the steps that follow:

1. Click the drop-down menu button in the upper right corner of the **Auxiliary Lights One** or **Auxiliary Lights Two** sections (below).



2. Click the **Extra Settings** option.

- The auxiliary lights *Extra Settings* menu will be shown. Look for the following section:



3. To control the on/off function of the Aux 1 lights *only*, click the **Toggle only Auxiliary Lights One on/off** radio button.
4. To control the on/off function of the Aux 1 lights *and* Aux 2 lights (in other words, to make the Aux 2 lights mirror the on/off condition of the Aux 1 lights), click the **Toggle both Auxiliary Lights One & Two on/off** radio button.
5. Click **OK**.

5.1.3.3.2 If no aftermarket Aux light switch is installed

If no aftermarket Auxiliary light switch is installed, use the motorcycle's DRL function to switch the auxiliary lights ON or OFF by doing the steps that follow:

1. Navigate to the **DRL** option in your KTM's instrument display **Settings** menu.
2. Toggle the DRL function twice. You can use either of the following sequences:

- ON → OFF → ON → OFF → ON
- OFF → ON → OFF → ON → OFF

Switching the auxiliary lights on or off	1. Stop the motorcycle. 2. Navigate to the DRL option in the KTM instrument display's Settings menu. 3. Toggle the DRL function twice.
Adjusting Aux 1 or Aux 2 light brightness	This can only be done using the Auxiliary Lights sections of the ezCAN configuration software.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.

5.1.3.3.3 If the Hex UP-DOWN switch is installed


The Hex UP-DOWN switch for controlling Aux lights is available as an accessory from Hex Innovate. To purchase a Hex UP-DOWN switch, [click here](#).

The Hex UP-DOWN switch option can be enabled using the Aux Lights Extra Settings menu. To configure the ezCAN to accept control input from a Hex UP-DOWN switch, do the steps that follow:

1. Click the drop-down menu button in the upper right corner of the **Auxiliary Lights One** or **Auxiliary Lights Two** sections (below).



2. Click the **Extra Settings** option.
 - The auxiliary lights Extra Settings menu will be shown.
3. Configure the ezCAN to accept control input from the Hex UP-DOWN switch by selecting the **Dual button switch** option (below).

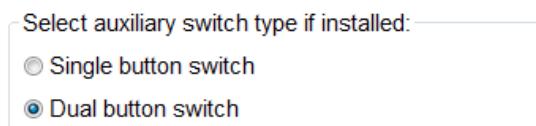

4. Click **OK**.

Switching the Aux 1 lights on and off	Briefly press and release the UP button.
Adjusting Aux 1 lights only	<ol style="list-style-type: none"> 1. Press and hold the UP button until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Briefly press and release the UP button to increase Aux 1 light brightness by 10% per press (to a maximum of 100%), or the DOWN button to decrease brightness by 10% per press (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the switch for more than 5 seconds.

Switching the Aux 2 lights on and off	Briefly press and release the DOWN button.
Adjusting Aux 2 lights only	<ol style="list-style-type: none"> 1. Press and hold the DOWN button until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Briefly press and release the UP button to increase Aux 2 light brightness by 10% per press (to a maximum of 100%), or the DOWN button to decrease brightness by 10% per press (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the switch for more than 5 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.

5.1.3.3.4 If an aftermarket single-button switch is installed


In context of ezCAN for KTM, a *single-button switch* is any off-the-shelf normally open (push-to-make) switch.

To configure the ezCAN to accept control input from a single-button switch, do the steps that follow:

1. Click the drop-down menu button in the upper right corner of the **Auxiliary Lights One** or **Auxiliary Lights Two** sections (below).



2. Click the **Extra Settings** option.
 - The auxiliary lights Extra Settings menu will be shown.
3. Configure the ezCAN to accept control input from the single-button switch by selecting the **Single button switch** option (below).

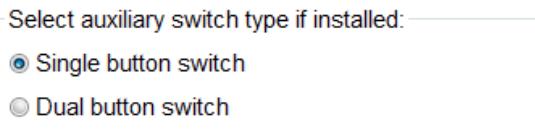

4. Click **OK**.

The single-button option controls the on/off function and brightness of the Aux 1 circuit only. To choose whether the Aux 2 lights switch on or off based on how the Aux 1 lights are commanded, see [Switching Aux 1 and Aux 2 lights independently](#).

Switching all Aux 1 (and optionally also all Aux 2) lights on or off	<p>Briefly press and release the single-button switch.</p> <ul style="list-style-type: none"> • The Aux 1 (and optionally also Aux 2) lights will be switched on or off according to the settings in the auxiliary lights <i>Extra Settings</i> menu.
--	--

Adjusting the Aux 1 lights	<ol style="list-style-type: none"> 1. Press and hold the single-button switch until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Release the single-button switch. 3. Briefly press and release the single-button switch to adjust light brightness. <ul style="list-style-type: none"> • Each press will brighten the Aux 1 lights by 10% to a maximum of 100%, then roll brightness through to 0% (OFF). • You can repeat this cycle as many times as you need. 4. Exit brightness-adjustment mode by not operating the single-button switch for more than 5 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	<p>NOTE</p>  <p>The brightness of Aux 2 lights cannot be adjusted using a single-button switch.</p> <p>If you want to adjust the brightness of Aux 1 <i>and</i> Aux 2 lights, we recommend using a Hex UP-DOWN switch instead.</p>

5.1.4 Honda

5.1.4.1 ezCAN II Sahara

Applicable models:

- CRF1100 Africa Twin

The ezCAN is controlled using the *Select Left/Right switch* (red arrows, below) and turn-signal cancel button (green arrow, below) on the left-side handlebar controls.



The *Select Left/Right switch* and *Turn-signal cancel button* referred to in this section are located on the Africa Twin's left-side handlebar controls. See the image above for details.

Adjusting Aux 1 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Select Left/Right</i> switch to the LEFT until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Select Left/Right</i> switch to the RIGHT to increase light brightness by 10% per click (to a maximum of 100%), or to the LEFT to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Select Left/Right</i> switch for more than 5 seconds.
Adjusting Aux 2 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Select Left/Right</i> switch to the RIGHT until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Select Left/Right</i> switch to the RIGHT to increase light brightness by 10% per click (to a maximum of 100%), or to the LEFT to decrease brightness by 10% per click (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Select Left/Right</i> switch for more than 5 seconds.
Toggling Aux 1 lights On and Off	Press and hold the turn-signal cancel button for more than 3 seconds. The state of the lights persists even if the ignition is cycled.
Toggling Aux 2 lights On and Off	Click the turn-signal cancel button three times. The state of the lights persists even if the ignition is cycled.
Temporarily switching off all front and rear auxiliary lights	Press and hold the turn-signal cancel button for more than 10 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button three times.



NOTES

If all front and rear auxiliary lights are temporarily switched off using the turn-signal cancel button (see table above for details), the ezCAN will turn the rear auxiliary lights back on:

- When the Aux 1 or Aux 2 lights are turned back on.
- After the ignition switch is cycled.

If any front auxiliary lights are switched off using the *Toggle On/Off* functionality, the Off state of the front auxiliary lights will persist even if the ignition switch is cycled.

5.1.5 Triumph

5.1.5.1 ezCAN II Tagus

Applicable models:

- Tiger 900
- 2022+ Tiger 1200

The ezCAN is controlled using the *Joystick button* (red arrow, below) and turn-signal cancel button (green arrow, below) on the left-side handlebar controls.



The *Joystick button* and *Turn-signal cancel button* referred to in this section are located on the Tiger's left-side handlebar controls. See the image above for details.

Adjusting Aux 1 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Joystick button</i> UP until the Aux 1 lights flash twice. <ul style="list-style-type: none"> • The Aux 1 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Joystick button</i> UP to increase light brightness by 10% per press (to a maximum of 100%), or DOWN to decrease brightness by 10% per press (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Joystick button</i> for more than 5 seconds.
Adjusting Aux 2 lights	<ol style="list-style-type: none"> 1. Press and hold the <i>Joystick button</i> DOWN until the Aux 2 lights flash twice. <ul style="list-style-type: none"> • The Aux 2 lights are now in brightness-adjustment mode. 2. Briefly press and release the <i>Joystick button</i> UP to increase light brightness by 10% per press (to a maximum of 100%), or DOWN to decrease brightness by 10% per press (to a minimum of 0%). 3. Exit brightness-adjustment mode by not operating the <i>Joystick button</i> for more than 5 seconds.
Toggling Aux 1 lights On and Off	Press and hold the turn-signal cancel button for more than 3 seconds. The state of the lights persists even if the ignition is cycled.
Toggling Aux 2 lights On and Off	Click the turn-signal cancel button three times. The state of the lights persists even if the ignition is cycled.

Temporarily switching off all front and rear auxiliary lights	Press and hold the turn-signal cancel button for more than 10 seconds.
Strobing Aux lights on 'Flash-to-pass' (if enabled through ezCAN configuration interface)	Click the motorcycle's 'Flash-to-pass' button four times.



NOTES

If all front and rear auxiliary lights are temporarily switched off using the turn-signal cancel button (see table above for details), the ezCAN will turn the rear auxiliary lights back on:

- When the Aux 1 or Aux 2 lights are turned back on.
- After the ignition switch is cycled.

If any front auxiliary lights are switched off using the *Toggle On/Off* functionality, the Off state of the front auxiliary lights will persist even if the ignition switch is cycled.

5.1.6 Husqvarna

5.1.6.1 ezCAN // Scandes

Applicable models:

- Norden 901 (2022+)
- Norden 901 Explorer (2023+)

The Norden 901 is based on the KTM 890 electronic platform, and is subject to the same ezCAN functionality limitations ([click here](#) for the list of limitations). Therefore, the motorcycle's factory controls cannot be used to control the ezCAN.



IMPORTANT

A dedicated *Hex LIN button* will be made available for the *ezCAN // Scandes* in the near future.

5.2 Adding and adjusting an auxiliary-light strobe delay on horn activation


If the *Strobe when Horn active* feature is enabled, and you want to use the factory horn for very short 'bursts' without strobing the front auxiliary lights, you can add a time delay of 0.25 seconds or 0.5 seconds between the time the horn button is pressed, and the time the front auxiliary lights begin to strobe.

To use this feature, do the steps that follow:

1. Click the drop-down menu button in the upper right corner of the **Auxiliary Lights One** or **Auxiliary Lights Two** sections (below).



2. Click the **Extra Settings** option.
 - The auxiliary lights Extra Settings menu will be shown.
3. Click-and-drag the *Adjust Strobe on Horn delay* slider to the **0.25 s** or **0.5 s** delay mark, as needed (below). Alternatively, set the slider fully to the left to disable the strobe-on-horn delay.

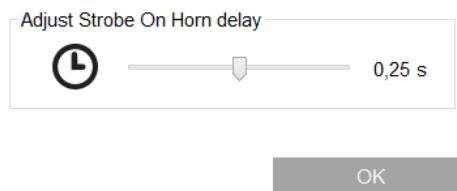

4. Click the **OK** button.

5.3 All other ezCAN functions



IMPORTANT

Note that you will need to configure the ezCAN before it works exactly the way you want it to.

For detailed instructions on how to configure the ezCAN by using the ezCAN configuration software, [click here](#).

5.3.1 Switching off front and rear auxiliary lights

If front and/or rear auxiliary lights are installed, all front and rear auxiliary lights can be temporarily switched off. Model-specific procedures for switching off all front and rear auxiliary lights are given in the table below.

Motorcycle	ezCAN model	Procedure
BMW (with MultiController)	BMW (with MultiController)	Press and hold the turn-signal cancel button for more than 5 seconds.
BMW (without MultiController)	BMW (without MultiController)	Press and hold the left switchgear INFO button for more than 10 seconds.
Harley-Davidson	ezCAN Laconia	Press and hold the left switchgear INFO button for more than 10 seconds.
Harley-Davidson	ezCAN Daytona	Press and hold the left switchgear TRIP or trigger button for more than 10 seconds.
KTM	ezCAN ezCAN II	Press and hold the turn-signal cancel button for more than 10 seconds.
KTM	ezCAN II Gobi	Press and hold the turn-signal cancel button for more than 10 seconds.
Honda	ezCAN Sahara	Press and hold the turn-signal cancel button for more than 10 seconds.

Triumph	ezCAN Tagus	Press and hold the turn-signal cancel button for more than 10 seconds.
Husqvarna	ezCAN Scandes	Press and hold the turn-signal cancel button for more than 10 seconds.



NOTES

If all front and rear auxiliary lights are temporarily switched off, the ezCAN will turn the rear auxiliary lights back on:

- Whenever Aux 1 or Aux 2 lights are turned back on.
- After the ignition switch is cycled.

5.3.2 Operating auxiliary rear/brake lights

Depending on configuration, an **auxiliary rear/brake light** will be active as a rear running light whenever the ignition switch is ON, and be active as a brake light whenever the brakes are used. To use this feature, set one or more power circuits to power auxiliary rear/brake lights. The **Auxiliary Brake Light** section of the ezCAN configuration software (below) will be shown.

Auxiliary Brake Light



5.3.3 Operating run/brake/turn lights

Depending on configuration, a **run/brake/turn light** will be active as a running light (in other words, at a lower brightness than brake light brightness) whenever the ignition switch is ON, active as a brake light whenever the brakes are used, and be active as a turn signal whenever the turn signal for the relevant side is switched on. To use this feature, set one or more power circuits to power left or right run/brake/turn lights. The **Run/Brake/Turn Light** section of the ezCAN configuration software will be shown (below, left). This section of the software is associated with the **Brake Left** and **Brake Right** circuit configuration options (below, right).

Run/Brake/Turn Light



Brake Left Brake Right

5.3.4 Operating 12-volt accessory power sockets

If a power circuit is set as a 12-volt accessory circuit, it will supply full battery voltage whenever the ignition switch is ON. To use this feature, set one or more power circuits to power an accessory circuit. The **Accessory**

/ **Ignition Supply** section of the ezCAN configuration software (below) will be shown.

This function has a configurable delay time-out (to a maximum of 60 seconds) that will keep the output ON for the configured time after the motorcycle's ignition has been switched OFF.



On software version 2009 and onward, the PWM/data pins of the Red, Blue and Yellow circuits (below) mimic the on/off state of the motorcycle's ignition switch if any of these circuits are configured as accessory circuits.



A typical use case might be if an accessory circuit is being used to power a dash cam. Dash cams are generally activated when the ignition is switched on, and save their video content when the ignition is switched off. Setting the accessory circuit's time delay to 60 seconds generally gives a dash cam sufficient time to complete its video saving and housekeeping routines before it shuts down.


In a case like this, the relevant ezCAN power circuit would be connected to the dash cam as follows:

- ezCAN PWM/data pin → Dash cam ignition trigger input
- ezCAN 12V+ power pin → Dash cam 12V input
- ezCAN ground pin → Dash cam Ground input

5.3.5 Operating auxiliary horns

A horn circuit will supply full battery voltage to all accessory horns whenever the ignition switch is ON, and the motorcycle's Horn button is pressed. To use this feature:

1. Set a power circuit to power an accessory horn.
 - The Auxiliary Horn section of the ezCAN configuration software will be shown (below).

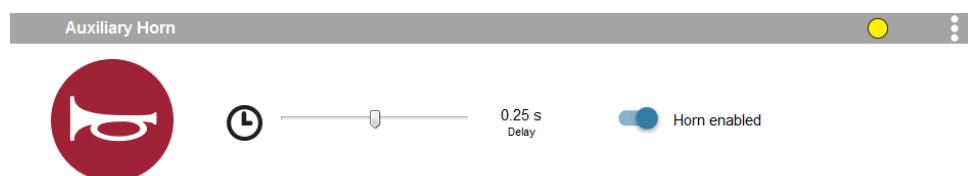


2. If you often use the factory horn for very short 'bursts' and want to avoid activating the accessory horn during a short burst, you can add a time delay of 0.25 seconds or 0.5 seconds between the time the horn button is pressed, and the time the horn activates, by clicking-and-dragging the *Delay* slider (below).

Alternatively, set the slider fully to the left to disable the horn delay.

5.3.6 Operating auxiliary turn signals

Depending on its configuration, an **auxiliary turn signal** will be active as a running light or marker light whenever the ignition switch is ON, active as a turn signal whenever the turn signal for that side is switched on, and active as an auxiliary hazard light whenever the hazard lights are switched on. To use this feature, set one or more power circuits to power auxiliary left or right turn signals. The **Turn Signals** section of the ezCAN configuration software will be shown (below, left). This section of the software is associated with the **Left Turn Signal** and **Right Turn Signal** circuit configuration options (below, right).

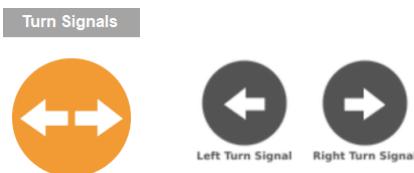


5.3.7 Operating heated gear

Heated gear is supported if:

- The motorcycle has *factory-installed* heated grips, and
- The ezCAN has software version 2009, or newer.

If a power circuit is configured as a **Heated Gear** power supply, the circuit's power is regulated using the motorcycle's factory heated grip controls. Depending on make and model, the motorcycle's heated grip control may have two, three or five heat level settings. Output power for heated gear can be selected individually for each of the heat levels. To set the **Heated Gear** power level for each of the heated grip settings, click-and-drag the slider between 0% (off) and 100% (maximum power) (below).

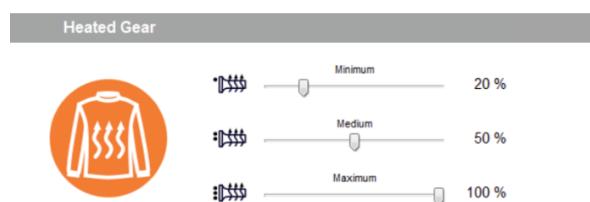

5.3.8 Disabling an ezCAN power circuit

If any ezCAN power circuit is not needed, you can disable it by opening the *Circuit Functions* dialogue, selecting the icon for the relevant circuit, and clicking the *Disable circuit* icon. If a power circuit is disabled, seal the female power circuit connector with one of the blanking plugs supplied with the kit.



5.4 Brand-specific functions

This section contains ezCAN functions that are unique to specific motorcycle makes and/or models.

5.4.1 KTM ABS/bad fuel modes functionality


On KTM 1090, 1190 and 1290 models (up to and including 2020 year-models), the ezCAN will allow you to activate all extra ABS modes and 'bad fuel' mode without needing the physical 'KTM ABS/Bad Fuel dongle'.

To access the extra modes, do the steps that follow:

1. Click the Extra Settings button in the upper right corner of the ezCAN configuration software (below).



2. Click the **KTM Dongle Feature** option in the drop-down menu (below).

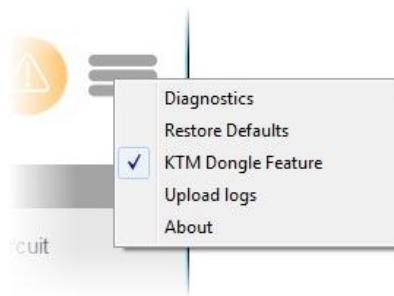

IMPORTANT

Whenever the KTM Dongle Feature is active, a warning icon will appear on the motorcycle's instrument cluster. This is normal.

- The KTM Dongle Feature will be activated.

- You can now use the motorcycle's instrument cluster menus to activate the *ABS Mode 1*, *ABS Off* and *Bad Fuel* modes.
- The motorcycle will remember your chosen ABS mode and fuel mode even if the ignition is switched off.

For detailed instructions on how to operate the KTM Dongle functions using the motorcycle's instrument cluster, refer to the relevant KTM documentation.

5.5 Brand-specific limitations

This section contains ezCAN limitations that are unique to specific motorcycle makes and/or models.

5.5.1 KTM

For information on ezCAN functionality limitations that apply to KTM 790 and 890 models, [click here](#).

5.5.2 Husqvarna

For information on ezCAN functionality limitations that apply to all Husqvarna Norden 901 models, [click here](#).

5.5.3 Triumph Tiger 900

For information on ezCAN functionality limitations that apply to all Triumph Tiger 900 models, [click here](#).

5.6 Importing and exporting your ezCAN setup configuration

You can save the configuration setup of your ezCAN for backup purposes, or to share with friends who would like to use your custom configuration setup. You can also upload saved configuration setup files to your ezCAN.

Your computer must be connected to the ezCAN using the supplied MicroUSB cable during this procedure.

If you want to save the configuration setup of your ezCAN for backup, or to share with another ezCAN user, do the steps that follow:

1. Click the Extra Settings button in the upper right corner of the ezCAN configuration software (below).



2. Click the **Export** option in the drop-down menu.
 - The ezCAN *Export Configuration* dialogue will be shown.

3. Save the ezCAN configuration (*.ezcan) file to a safe place on your computer.

You can copy and forward ezCAN configuration files to whoever you want.

If you want to upload a custom configuration setup file to your ezCAN, do the steps that follow:

1. Click the Extra Settings button in the upper right corner of the ezCAN configuration software (below).




2. Click the **Import** option in the drop-down menu.
 - The ezCAN *Import Configuration* dialogue will be shown.
3. Search for and select the needed ezCAN configuration (*.ezcan) file on your computer.
4. Click the **Open** button.
 - The chosen configuration file will be uploaded to your ezCAN.

6 IF SOMETHING GOES WRONG

In the unlikely event that something goes wrong with your ezCAN or your accessory installation, follow the guidelines in this section to get things working again.

6.1 What do the Status LED colours mean?

Switch the motorcycle's ignition switch ON. Check the Status LED on the end of the ezCAN (below).

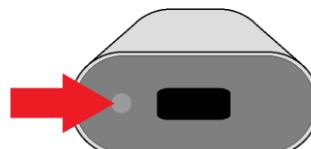

The Status LED light codes have the following meanings:


Status LED codes	
LED code	Meaning
Constant green	The motorcycle's ignition is switched on, and the ezCAN is operating normally.
No LED activity	The ezCAN is in Sleep Mode. It will switch on the next time the motorcycle's ignition is switched on (see <i>Constant green</i> above).
Quick flashing green while connected to computer by USB	<p>The ezCAN is downloading and installing a firmware update.</p> <div style="border: 1px solid #ccc; padding: 5px; margin-top: 5px;"> CAUTION  Do not disconnect the ezCAN from your computer until the firmware installation is complete. </div>
Quick flashing orange	<p>CAN-bus data needed by the ezCAN is missing or incorrect, or there is a configuration error.</p> <ol style="list-style-type: none"> 1. Reset the ezCAN by switching the ignition OFF, then ON. 2. If the LED does not show constant green, connect the ezCAN to your computer and run the configuration software. 3. Navigate to the ezCAN Diagnostics window. 4. Note the CAN-bus data value in the System section. This value should be <i>Active</i>. If the value is <i>Inactive</i>, make sure the ezCAN is securely connected to the correct CAN-bus connector on the motorcycle. 5. If the problem persists, contact Hex support by sending an E-mail to support@hexezCAN.com.
Quick flashing red	<p>One or more of the electronic circuit fuses have 'tripped'. This may be due to a current overload, or to incorrectly configured current limits.</p> <p>Refer to the <i>One or more power output circuits have stopped working</i> section of the ezCAN fault diagnosis table in this section.</p>

Constant red	The ezCAN reset unexpectedly. 1. Connect the ezCAN to your computer and run the configuration software. <ul style="list-style-type: none">• The ezCAN will attempt a self-recovery. 2. If self-recovery is unsuccessful, contact Hex support by sending an E-mail to support@hexezCAN.com .
Solid green with quick flashing orange	The ezCAN's application firmware is corrupt. 1. Connect the ezCAN to your computer and run the configuration software. 2. You should see a firmware update or firmware recovery dialogue. Follow the prompts to completion. 3. If a firmware dialogue is not shown, contact Hex support by sending an E-mail to support@hexezCAN.com .
Solid orange, or no LED visible when the motorcycle's ignition is switched on	The ezCAN has an internal error. 1. Connect the ezCAN to your computer and run the configuration software. <ul style="list-style-type: none">• The ezCAN will attempt a self-recovery. 2. If self-recovery is unsuccessful, contact Hex support by sending an E-mail to support@hexezCAN.com .

6.2 Using the ezCAN *Diagnostics* window

If you cannot solve the problem using the table above, do the steps that follow:

1. Connect the ezCAN to your computer.
2. Launch the ezCAN configuration software.
3. Switch the motorcycle's ignition ON.
4. Navigate to the *Diagnostics* window (below) by clicking on the warning triangle in the upper right corner of the ezCAN Configuration Tool, or by clicking the *Diagnostics* option in the Configuration Tool's main menu.

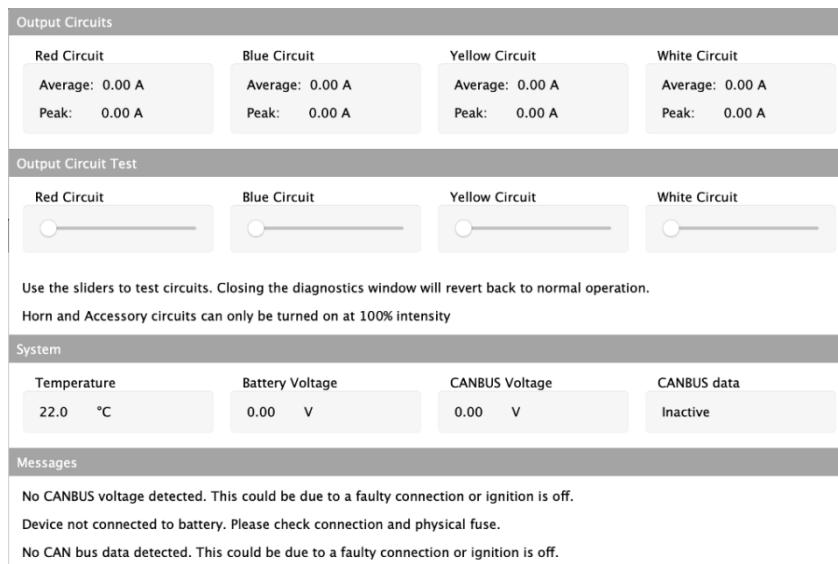

5. The *Diagnostics* window is partitioned into four sections:

- **Output Circuits:** This section shows the real-time Average current and Peak current for each power circuit since the ignition was last switched ON.
- **Output Circuit Test:** This section overrides the standard ezCAN control inputs, and allows you to control the Pulse Width Modulation for each circuit by clicking-and-dragging the sliders. This section is used to test the functional state of the ezCAN, its software configuration, the state of the power circuit wiring, and the accessories connected to the power output circuits.



NOTES

Horn and Accessory/Ignition outputs can only be switched ON and OFF.

If an auxiliary light circuit is set to *2-wire mode*, current to the 12V+ power terminal (solid coloured wire) will be modulated.

If an auxiliary light circuit is set to *3-wire mode*, current to the PWM/data brightness terminal (coloured wire with white or black tracer) will be modulated.

- **System:** This section shows various real-time data parameters relevant to the ezCAN.
- **Messages:** This section shows messages, hints and recommendations given the current status of the ezCAN.

6. Refer to the **ezCAN fault diagnosis** table below.

ezCAN fault diagnosis	
Symptom	Solution
One or more power output circuits have stopped working.	<ol style="list-style-type: none"> 1. Reset the ezCAN's software fuses by switching the ignition OFF, then ON. 2. If a power circuit disables repeatedly: <ol style="list-style-type: none"> i. Check whether the ezCAN Status LED is flashing red, or if an OVERLOAD! warning is given for the relevant power circuit in the ezCAN Diagnostics window. If this happens, the circuit has deactivated ('tripped'). This may be due to a current overload, or to incorrectly-set current limits. ii. Make sure the cut-off amperage limit for the circuit has not been set too low. If needed, re-calculate the accessory's power consumption as shown in <u>Calculating power consumption</u>, and select the correct power cut-off value for the circuit. iii. Check the ezCAN and the accessory wiring for physical damage that might be causing a short circuit. Properly repair and insulate all breaks in the wiring. Reposition and re-secure affected wiring so it cannot be damaged again.

<p>An accessory isn't working, but the Diagnostics window isn't showing an overload for that circuit.</p>	<ol style="list-style-type: none"> 1. Make sure all power circuit plugs are securely connected. 2. Open the ezCAN Diagnostics window. 3. Under Output Circuit Test, click-and-drag the slider for the affected circuit. <ul style="list-style-type: none"> • The accessory connected to the circuit should respond accordingly. 4. If the accessory does not respond, check that the software configuration for the circuit is correct. 5. If the accessory still does not respond, connect it to another ezCAN power circuit, and repeat steps 3 and 4 above.
<p>The ezCAN software interface shows a green message notification (below).</p> 	<p>The combined maximum current limit for the four power circuits has been set at more than 30 Amps.</p> <div style="background-color: #e0e0e0; padding: 10px; border-radius: 10px; text-align: center;"> <p>IMPORTANT</p> <p>If all power outputs are not operated simultaneously, this may be an acceptable condition.</p> <p>However, note that the main fuse may blow if the ezCAN draws more than 30 Amps.</p> </div> <p>View the average and peak current draw for each power circuit since the ignition switch was last turned on in the Output Circuits section of the ezCAN Diagnostics window. This may help if you need to fine-tune the fuse trip limits. Re-calculate the maximum current draw for all circuits as shown in <u>Calculating power consumption</u>. If needed, reduce the fuse trip limit on one or more circuits.</p>
<p>The ezCAN software interface shows an orange message notification (below).</p> 	<ul style="list-style-type: none"> • The ezCAN may not be connected to battery power. • The motorcycle's battery voltage may be too low. • The motorcycle's CAN bus voltage may be too low. • CAN data may be missing, or is not being detected. <p>Check the following items:</p> <ul style="list-style-type: none"> • Make sure the motorcycle's ignition is switched ON. • Check the Messages section of the ezCAN Diagnostics window. If you see a message that data is not being received, make sure the motorcycle's kill switch is in the RUN position. • Make sure the ezCAN is receiving acceptable battery voltage. If your motorcycle does not have a voltmeter, check the Battery Voltage value in the System section of the ezCAN Diagnostics window. This value should be more than 11 volts with the ignition switch ON and engine OFF, and approximately 14 volts if the engine is running. • Check the CAN-bus data value in the System section of the ezCAN Diagnostics window. The value should be <i>Active</i>. If the value is <i>Inactive</i>, make sure the ezCAN is securely connected to the correct CAN-bus connector on the motorcycle. • Make sure the ezCAN's battery connections are secure. • Make sure the ezCAN main fuse is not blown. • If the ezCAN main fuse is blown, check for short circuits along the ezCAN wiring and accessory wiring. Replace the main fuse only with one of the same type and 30 Amp rating.

<p>The ezCAN software interface shows a red message notification (below).</p> 	<p>The USB connection between the ezCAN and computer has been interrupted.</p> <p>If you are doing configuration or diagnostics, make sure the USB cable is securely connected to the computer and to the ezCAN.</p>
<p>The standard horn works, but the accessory horn does not (all ezCAN models with green horn input harness, and all KTM models).</p>	<ol style="list-style-type: none"> 1. Check the Horn Input Voltage value in the System section of the ezCAN Diagnostics window. If the motorcycle's Horn button is not being pressed, the value should be 0.00V. 2. Press the motorcycle's Horn button. <ul style="list-style-type: none"> • The value should now be approximately the same as the Battery Voltage value. • If the Horn Input Voltage value remains 0.00V when the horn button is pressed, check that the ezCAN's green horn input harness is not disconnected, and that there are no breaks in the horn harness wiring. • If the Horn Input Voltage value is approximately the same as the Battery Voltage value when the Horn button is pressed, but the accessory horn still does not work, check the ezCAN's accessory horn power output circuit wiring for breaks or short circuits.
<p>Front auxiliary lights flicker or 'stutter' when their brightness is adjusted, or their brightness adjustment seems to 'jump' between low and high.</p>	<ol style="list-style-type: none"> 1. Connect the ezCAN to your computer and run the configuration software. 2. In the relevant Auxiliary Lights One/Two section, check that the correct Three-Wire Dimming Mode setting is being used: <ul style="list-style-type: none"> • This setting must be ON for three-wire auxiliary lights. • This setting must be OFF for two-wire auxiliary lights. <div data-bbox="674 1291 737 1370" data-label="Image"> </div> <div data-bbox="793 1300 879 1331" data-label="Section-Header"> NOTE </div> <div data-bbox="793 1345 1266 1430" data-label="Text"> <p>Some lower-quality 2-wire LED lights perform poorly when their supply voltage is pulse-width modulated.</p> </div> <div data-bbox="793 1441 1255 1527" data-label="Text"> <p>It is recommended that you use only high-quality LED lights, or LED lights that are known to perform well.</p> </div>

7 SPECIFICATIONS

Generation II hardware specifications	
Physical size	76mm x 30mm x 16mm
Voltage supply	6V to 18V
System fuse rating	30A, automotive mini blade fuse
Maximum continuous current	30A (25A recommended)
Current consumption (operating)	25mA (typical)
Current consumption (sleep)	750µA (typical) 1mA (max)
Number of output circuits	Four, each with switched 12V power, Ground and PWM/data brightness control wire
Output circuit current	10A per circuit (continuous) 25A (max) for 25 seconds
Output circuit fusing	Electronic fuses, configurable from 1A to 25A
Output circuit 3rd wire (PWM/data control)	40mA (short circuit current)
<i>Measurement ranges:</i>	
Output current	0 to 72A
CAN-bus voltage	0 to 22V
Horn input	0 to 22V
Switch input	0 to 3.3V
Internal thermal protection	90°C maximum internal temperature
Transient protection	As per UN ECE Regulation 10 (Revision 5)
CAN connectivity	1x CAN 2.0B
USB connectivity	USB V2.0 full speed, micro B-type connector
LIN connectivity	Configurable LIN master (White power circuit)
Water and dust protection	Sealed unit. Waterproof USB connector with dust cover and sealed connectors

Product	Type approval number
Generation I 2-wire devices	No approval
Generation I 3-wire devices	No approval
Generation I 3-wire devices ²	E11*10R05/01*10262*00
Generation II devices ²	E11*10R05/00*10443*00
Generation II devices ²	E11*10R05/00*10443*01
Generation II devices ²	E11*10R06*10443



² The E type approval number is shown on the bar-coded label affixed to the ezCAN's main body (above).

8 NOTICES AND COPYRIGHT

© Hex Innovate (UK) Ltd, 2020 and onward. All rights reserved in perpetuity.

This manual and the software described in it must not, in whole or in part, be reproduced, translated or reduced to any machine-readable form without the prior written consent of Hex Innovate (UK) Ltd. Reproduction, distribution, utilisation and/or communication of this document, or any part thereof, without express authorisation is strictly prohibited. Offenders will be held liable for payment of damages.

All rights (including intellectual property rights) flowing from, incidental to or contained in this document irrevocably rest with Hex Innovate (UK) Ltd. unless otherwise agreed in writing.

ezCAN is a registered trademark of Hex Innovate (UK) Ltd. All other trademarks and/or registered trademarks described in this document are the property of their respective owners.

Hex Innovate (UK) Ltd. provides no warranty with regard to this manual, software or other information contained herein, and hereby expressly disclaims any implied warranties of merchantability or fitness for any particular purpose with regard to this manual, the software or such other information. In no event shall Hex Innovate (UK) Ltd. be held liable for any incidental, consequential or special damages, whether based on tort, contract or otherwise, arising out of or in connection with this manual, the software or other information contained herein, or use thereof.

Hex Innovate (UK) Ltd. has a policy of continuous product improvement, and specifications and features may change without notice. Hex Innovate (UK) Ltd reserves the right to make any modification to this manual or the information contained herein, at any time, and without notice. The software described herein may also be governed by the terms of a separate end-user license agreement.